
CWM Macro-Scale Experiment Guide

Mike Tierce

Independent Researcher

ORCID: [0009-0004-3869-958X](https://orcid.org/0009-0004-3869-958X)

github.com/miketierce/wcfoma

Version

About This Document

This companion document contains the complete macro-scale experiment guide, full-scale illustration plates, and printable data worksheets for reproducing the Coherent Wave Memory (CWM) prototype experiments described in Section 4 of the main paper.

The guide is self-contained: every component is listed with a direct purchase link, every procedure is numbered for reproducibility, and every known failure mode includes a tested mitigation. A middle school science teacher with no acoustics background should be able to build the prototype, complete all eight experiments, and contribute publishable data within a single school week. See Section 4 of the main paper for the theoretical context behind each measurement.

All quantitative claims in the main paper are computed from first-principles simulation code (34 modules, 1,036 automated tests, all passing) and independently validated by finite element analysis. No curve fitting, no adjusted parameters, no post-hoc corrections. Repository: github.com/miketierce/wcfoma.

Appendix D: Macro-Scale Experiment Guide

This appendix provides step-by-step instructions for replicating the macro-scale prototype experiments of Section 4. The guide is designed to be self-contained: every component is listed with a direct purchase link, every procedure is numbered for reproducibility, and every known failure mode includes a tested mitigation. A middle school science teacher with no acoustics background should be able to build the prototype, complete all eight experiments, and contribute publishable data within a single school week. See Section 4 for the theoretical context behind each measurement.

The glass harmonica connection. Every experiment in this appendix is a direct descendant of a musical instrument that predates the transistor by centuries. A glass harmonica—tuned wineglasses played by rubbing a wet finger around the rim—demonstrates every principle of CWM in audible form: glass resonators with eigenfrequencies set by geometry, mass perturbation tuning via water level, continuous-wave excitation via stick-slip friction, and spectral readout by the human ear. In 1761, Benjamin Franklin attended a glass harmonica concert in London and built an improved version: the *glass armonica*, which mounted the bowls on a rotating spindle so a performer could vary finger pressure, position, and contact duration in real time. Same glass, same physics, same resonant modes—but now reconfigurable. This appendix walks the same path: Experiments 1–6 build and characterize a fixed resonator (the harmonica); Experiment 7 demonstrates continuous-wave precision readout (bowing vs. ringing); Experiment 8 demonstrates rewritable encoding with water drops (the armonica); and Experiments 9–11 demonstrate packed-array operations—associative recall, nearest-neighbor search, and in-situ Boolean computation.

D.1 Complete Bill of Materials

The core BOM from Section 4.2 is expanded below with recommended quantities (extras for breakage and controls), supplier links, and additional items needed for failure-mode mitigations. All prices are approximate as of 2026 and may vary.

Table D.1: Core Components

#	Component	Specification	Qty	Est. Cost	Amazon Link
1	Borosilicate glass stirring rods	6 mm dia × 150 mm (5.9"), rounded ends, Boro 3.3	15-pack	~\$8	PATIKIL 15 Pcs, 5.9" × 6 mm
2	Borosilicate glass stirring rods (alt.)	6 mm dia × 200 mm (7.9"), Boro 3.3—cut to 150 mm if needed	10-pack	~\$9	EISCO 10PK, 7.9" × 6 mm
3	Piezoelectric discs with leads	10 mm dia, PZT ceramic, pre-soldered 4" wire leads	15-pack	~\$7	E-outstanding 15 PCS, 10 mm
4	Piezoelectric discs (alt.)	10 mm dia, PZT, bare discs (solder leads yourself)	10-pack	~\$6	uxcell 10 Pcs, 10 mm
5	USB oscilloscope + waveform generator	PicoScope 2204A, 10 MHz BW, 2-ch, built-in AWG, PS7 software	1	~\$192	PicoScope 2204A
6	Cyanoacrylate glue (super glue)	Medium viscosity, precision tip, gel formula	1	~\$5	Loctite Ultra Gel Control, 4 g
7	Moldable silicone putty earplugs	Mack's Pillow Soft, moldable silicone putty (perturbation masses)	1 pack	~\$9	Mack's Pillow Soft, 8 Pair
8	BNC cables (male–male, 50 Ω)	1 m length, for PicoScope connection	2	~\$10	Included with PicoScope kit; extras available at any electronics supplier
	Core materials (without scope)			~39–54	
	Core materials (with PicoScope)			~231–246	

Table D.2: Mitigation and Measurement Accessories

#	Component	Purpose (failure mode addressed)	Qty	Est. Cost	Source
9	Cardboard (from any box)	Rod-support dividers for cooler (FM 1: anchor loss)	2 pieces	free	Any shipping box or cereal box
10	Digital thermometer, 0.1 °C resolution	Thermal drift monitoring (FM 3)	1	~\$12	Any kitchen/lab thermometer with 0.1 °C readout
11	Styrofoam cooler, small (~6-qt)	Thermal enclosure (FM 3: drift isolation)	1	~\$5	Grocery or hardware store
12	Milligram precision scale (0.001 g)	Weighing perturbation masses	1	~\$20	Amazon search: “milligram scale 0.001g”
13	Metric ruler, mm scale	Positioning masses along rod	1	~\$3	Any school supply
14	Isopropyl alcohol, 91 %+	Cleaning glass rods before assembly	1 bottle	~\$4	Any pharmacy
15	Safety glasses	Eye protection (glass rods can snap)	1 per person	~\$3	Any hardware store
16	Masking tape	PZT alignment jig (FM 2: centering)	1 roll	~\$4	Any hardware store
17	Fine-tip permanent marker	Marking positions on rod	1	~\$2	Any office supply
18	Soft lint-free cloth	Handling and cleaning glass	several	~\$2	Any store
19	Acetone (nail polish remover)	Emergency super-glue skin-bond release	1 small bottle	~\$3	Any pharmacy
20	Plastic transfer pipettes (3 mL)	Placing water drops for Exp. 8 (rewritability)	1 pack	~\$4	Amazon search: “plastic transfer pipettes”
21	Small bowl of water	CW excitation via wet finger (Exp. 7)	—	free	Tap water
22	Hollow punch set (5–13 mm)	Clean 7 mm pinholes in cardboard dividers	1 set	~\$10	Jmuiiu 8 Pcs, 5–13 mm
	Accessories subtotal			~\$72	
	Grand total (without scope)			~111–126	
	Grand total (with PicoScope)			~303–318	

Budget note. Most schools already own an oscilloscope with FFT capability and a function generator—if so, skip item 5 and the core materials cost is just ~\$39. *For labs without a scope, we recommend the PicoScope 2204A (192)*, which provides both the waveform generator (transmit) and the digitizer (receive) in one USB device with free cross-platform software (PS7). Any oscilloscope with ≥ 200 kHz bandwidth and a separate function generator will also work. The 15 glass rods and 15 PZT discs provide enough spares for multiple student groups, breakage, and control experiments. One kit serves an entire class.

D.2 Safety Notes

⚠ Glass hazard. Borosilicate rods can snap if bent or dropped. Always wear safety glasses when handling rods. Dispose of broken glass in a rigid sharps container, never a trash bag.

⚠ Cyanoacrylate (super glue). Bonds skin instantly. Keep acetone (nail polish remover) on hand to dissolve accidental skin bonds. Work in a ventilated area. Supervise younger students closely during the gluing step.

⚠ Hearing. The fundamental mode (17.7 kHz) is near the upper limit of human hearing. Some students may hear a faint whine during high-amplitude excitation. This is harmless at the drive levels used here (≤ 1 V), but if anyone reports discomfort, reduce the AWG amplitude to 0.1 V.

D.3 Experiment 1 — Building the Resonator

Objective: Assemble a functioning glass-rod acoustic resonator and verify electrical connectivity.

Time: 30 minutes active + 24 hours glue cure.

Materials: Items 1 or 2, 3 or 4, 6, 9, 16, 18 from the BOM.

Procedure:

1. **Clean the rod.** Wipe one glass rod with isopropyl alcohol and a soft cloth. Allow 2 minutes to dry completely. Finger oils dampen vibrations measurably.
2. **Build the cardboard rod mount inside the cooler.** Cut two rectangles of cardboard sized to slot snugly inside the styrofoam cooler. Using the 7 mm hollow punch from the kit (item 22), punch a clean hole through each rectangle at the same height—sized just large enough for the 6 mm rod to pass through with minimal contact. Slot the dividers into the cooler spaced 75 mm apart, centered on the rod—this places each support at $L/4$ and $3L/4$ from one end (37.5 mm and 112.5 mm for a 150 mm rod). These positions are the exact displacement nodes of the second longitudinal mode—the acoustic “stems” of the rod. The rod should pass through the pinholes and hang freely with no hard clamping. Position the first divider so that the PZT disc and its leads protrude outside the cooler for easy connection. A wine glass rings because you hold it by the stem, a vibrational node where energy cannot escape; the same physics governs your rod mount (see Failure Mode 6 and Section 7). For multi-rod experiments, punch a grid of pinholes in the dividers to create isolated chambers for each rod—simulating a packed-array architecture. Printable pinhole templates are provided at the end of this guide (Templates T.1 and T.2); print at 100% scale, trace onto your cardboard, and punch.

Why cardboard? The support material matters far less than the support *position*. At a true displacement node, the rod surface has zero displacement—no energy can transfer to the support regardless of what the support is made of. This is the same reason a wine glass doesn’t care whether its stem is crystal, ceramic, or plastic: the stem is at a node, so the resonance is indifferent to the stem’s material properties. The acoustic impedance mismatch between glass ($Z \approx 1.2 \times 10^7$ Pa·s/m) and cardboard ($Z \approx 10^4$ – 10^5 Pa·s/m) means that even at positions with residual displacement, ~99.9% of acoustic energy is reflected at the glass–cardboard interface rather than transmitted. The contact area is just a thin ring around the pinhole edge—much less than a foam V-notch cradle—further limiting energy transfer. In practice, cardboard pinholes at the correct nodal positions yield Q values within 5% of foam cradles, while offering three advantages: (1) the dividers slot into the cooler walls, providing rigid, repeatable positioning without tape or rubber bands; (2) they are free; and (3) they naturally partition the cooler interior into isolated chambers for multi-rod array experiments—something foam cannot do.

One caution: if the pinhole is too tight, it clamps the rod and creates exactly the hard-contact damping you’re trying to avoid. The hole should be just loose enough that the rod slides through with a gentle push. The 7 mm hollow punch (item 22) produces a clean hole 1 mm larger than the rod—ideal clearance. If you don’t have a punch set, a pushpin hole gradually enlarged with a pencil tip also works. See the Diagnostic Test in Failure Mode 6 below for a quantitative check.

1. **Center the PZT disc (critical).** Cut two small strips of masking tape (~12 mm each). Adhere them in a cross-hair pattern centered on the flat end face of the rod. The intersection marks the center of the 6 mm face—this is where the PZT must go. An off-center disc excites transverse and torsional modes that pollute the spectrum (Failure Mode 2).
2. **Apply glue sparingly.** Place one tiny drop of cyanoacrylate—smaller than a pinhead, less than 0.5 mm in diameter—at the center of the cross-hair. *Less is more:* excess glue adds mass and viscoelastic damping that destroys the quality factor (Failure Mode 1).
3. **Attach the PZT disc.** Press the flat face of the PZT disc onto the glued spot, centering it on the cross-hair. Hold firm, even pressure for 30 seconds. Gently peel away the tape cross-hair strips.
4. **Cure.** Set the assembly aside in the cooler mount for a full 24 hours. Cyanoacrylate reaches full bond strength overnight; rushing produces a weak, lossy joint.

5. **Connectivity check.** Connect the PZT leads to the PicoScope Channel A input via a BNC adapter or clip leads. Set the scope to AC coupling, 1 mV/div, 1 ms/div timebase. Gently tap the free end of the rod with a fingernail. You should see a decaying burst of oscillation on screen. If no signal appears: check wire connections, ensure the PZT is not cracked, and try a firmer tap.

❗ Failure Mode 1 — PZT/Epoxy Boundary Damping (Low Q)

The glue joint and PZT disc add mass and internal friction at the rod end, potentially reducing Q from the intrinsic material value (~10,000) to below 100 if done carelessly.

- Use the *absolute minimum* glue: one drop smaller than a pinhead.
- Ensure the cured glue layer is thin (≤ 0.1 mm). A thick glue layer acts as a lossy viscoelastic coupling that absorbs acoustic energy each cycle.
- Build a second “control” rod with *no* PZT attached—excite it by tap only and record its ring-down via a nearby microphone or laser vibrometer (if available). Comparing Q values between the two rods isolates the damping contribution of the PZT joint.
- If Q is unacceptably low (≤ 500 after Experiment 2), scrape off the PZT with a razor blade, clean the end face with alcohol, and re-glue with a smaller drop.

❗ Failure Mode 6 — Support-Point Energy Drain (the Glass Harp Lesson)

A wine glass rings brilliantly because you hold it by the stem—a point of zero vibrational displacement (a node) for the rim’s flexural modes. Energy cannot leak through a point that isn’t moving. Press your finger against the rim itself and the tone dies instantly: the support is now at an antinode, and your finger becomes an acoustic drain.

The same physics governs your rod mount. For a free-free rod vibrating in its n -th longitudinal mode, the displacement pattern is $u(x) = \cos(n\pi x/L)$. The displacement nodes—the “stems”—occur at:

Mode	Node positions
$n = 1$	$L/2$ (center)
$n = 2$	$L/4$ and $3L/4$
$n = 3$	$L/6$, $L/2$, and $5L/6$

The recommended support positions at $L/4$ and $3L/4$ (step 2) are the exact nodes of mode 2, and they produce only 50% of peak displacement for mode 1—a good all-round compromise for multi-mode measurements.

If your Q values are lower than expected despite a clean PZT bond:

- **Verify support positions.** Measure from one end: 37.5 mm and 112.5 mm for a 150 mm rod. Mark the positions with a fine-tip marker before punching the pinholes.
- **Try midpoint mounting.** For mode-1-only measurements, a single divider at $L/2 = 75$ mm is the ideal node and will maximize Q for the fundamental. (This sacrifices mode 2, which has an antinode there.)
- **Check pinhole size.** The hole should be just large enough for the rod to pass through without binding. Too tight and the cardboard clamps the rod, draining energy. Too loose and the rod rattles.
- **Upgrade to fishing line.** Loop a thin monofilament line around the rod at the node position and tension it between two fixed posts. This gives near-zero contact area and mimics the knife-edge mounts used in precision metrology. Students who have played a glass harp will immediately feel the analogy: the taut line is the stem.
- **Diagnostic test.** Slide the rod so through the pinholes so one support is at the center ($L/2$) and measure Q for mode 1. Then reposition to $L/4$ and remeasure. If Q changes by more than 20%, your pinholes are too tight or making hard contact—enlarge them slightly or use fishing line.

D.4 Experiment 2 — Measuring the Quality Factor

Objective: Determine Q via two independent methods (ring-down and bandwidth) and confirm the resonator is material-loss-limited.

Time: 45 minutes.

Materials: Assembled resonator from Exp. 1, PicoScope 2204A, BNC cable, cooler mount.

Procedure:

1. **Set up.** Place the resonator in the cooler mount on a stable surface (no vibration from HVAC, foot traffic, etc.). Connect the PZT leads to both the PicoScope AWG output (waveform generator) and Channel A input. A BNC T-connector works, or simply share the two PZT leads between the AWG and scope clips.
2. **Impulse excitation.** In the PicoScope software (PS7, free download), configure the AWG to output a single 1-cycle burst at 17,700 Hz with 0.5 V amplitude. Set Channel A to trigger on the rising edge. Set the timebase to 50 ms/div so the display shows ~500 ms of data.
3. **Capture the ring-down.** Trigger the burst and record the decaying sinusoidal waveform. The oscillation frequency should be near 17.7 kHz; the amplitude should decay smoothly.
4. **Measure τ (time constant).** The envelope follows $A(t) = A_0 e^{-t/\tau}$. Identify the initial peak amplitude A_0 , then find the time t at which the envelope has dropped to $A_0/e \approx 0.368 \times A_0$. That time is τ . Alternatively, use PicoScope's cursor measurements to read the $1/e$ point directly.
5. **Calculate Q from ring-down:**

$$Q_{\text{ringdown}} = \pi f_1 \tau$$

For example: $f_1 = 17,700$ Hz, $\tau = 180$ ms gives $Q = \pi \times 17,700 \times 0.180 = 10,006$.

1. **Cross-check via bandwidth method.** Switch PicoScope to spectrum (FFT) mode. Drive the rod with a slow linear frequency sweep (chirp) from 17,000 Hz to 18,500 Hz over 2 seconds at 0.2 V amplitude. In the FFT view, locate the resonance peak. Measure the full width at half-maximum power (the -3 dB bandwidth, $\Delta f_{3\text{dB}}$ —the frequency span where the peak drops to 70.7% of its maximum amplitude, or -3 dB from the peak). Calculate:

$$Q_{\text{bandwidth}} = \frac{f_1}{\Delta f_{3\text{dB}}}$$

1. **Compare the two Q values.** They should agree within 10%. Record all results in Worksheet D.1.

Failure Mode 4 — Piezoelectric Self-Resonance Masking

A 10 mm PZT disc has its own radial resonance, typically at 200–300 kHz—well above the glass rod's fundamental (17.7 kHz). However, some disc types have a thickness resonance at lower frequencies that can overlap with glass-rod harmonics.

To identify PZT artifacts:

- *Before* gluing (during your next build), hold a bare PZT disc by its leads in free air and tap it gently. Record the FFT spectrum—these are PZT-only resonances.
- After assembly, compare the full spectrum against the PZT-only spectrum. Any peak that appears in both is a PZT artifact, not a glass eigenmode.
- True glass-rod longitudinal modes are evenly spaced at $\Delta f = v_{\text{bar}}/(2L) \approx 17,700$ Hz. PZT resonances do *not* follow this comb pattern. Any peak that falls off the comb by more than 1% is suspect.

Worksheet D.1 — Quality Factor Measurement

CWM Macro-Scale Experiment Guide · Coherent Wave Memory

Print one copy per rod. Record ring-down and bandwidth Q values for comparison.

Parameter	Rod 1	Rod 2	Rod 3
Date / Time	15 Mar 2026, 14:30		
Experimenter	A. Student		
Room temperature (°C)	22.3		
Rod length L (mm)	150.2		
Rod diameter d (mm)	6.01		
Glue amount (tiny / small / medium)	tiny		
Measured f_1 (Hz)	17,693		
Predicted $f_1 = 5,315 / (2L)$ (Hz)	17,694		
Ring-down τ (ms)	168		
Q (ring-down) $= \pi f_1 \tau$	9,335		
−3 dB bandwidth Δf_{dB} (Hz)	1.9		
Q (bandwidth) $= f_1 / \Delta f_{dB}$	9,312		
Two methods agree within 10%? (Y/N)	Y ✓		
Notes	Clean bond, thin glue		

Expected results. Q should fall in the range 1,000–10,000. Values near 10,000 indicate excellent construction (material-loss-limited). Values below 500 suggest excessive glue, poor PZT centering, or a hard contact point on the mount—rebuild with corrections per the Failure Mode 1 mitigation above. A control rod with no PZT (tap-excited) should yield Q near 10,000, confirming the intrinsic glass value.

D.5 Experiment 3 — Mapping the Mode Spectrum

Objective: Identify the longitudinal eigenmode comb and distinguish real modes from transverse/torsional artifacts.

Time: 45 minutes.

Materials: Assembled resonator, PicoScope, BNC cable, cooler mount.

Procedure:

1. **Configure the chirp.** Set the PicoScope AWG to output a linear frequency sweep from 1 kHz to 200 kHz over 1 second at 0.5 V amplitude.
2. **Capture the response.** Record Channel A during the chirp with FFT mode enabled. Use a Hanning window and at least 16,384 FFT points for ~1 Hz frequency resolution.
3. **Identify the mode comb.** Longitudinal modes appear as evenly spaced peaks at:

Mode n	Predicted frequency
1	17,717 Hz
2	35,434 Hz
3	53,150 Hz
4	70,867 Hz
5	88,584 Hz
6	106,301 Hz
7	124,018 Hz
n	$n \times 5,315/(2L)$ Hz

1. **Mark confirmed modes.** On the FFT display (or in a screenshot), mark each peak that falls within $\pm 0.5\%$ of a predicted comb frequency. These are your confirmed longitudinal eigenmodes.
2. **Catalog spurious peaks.** Any peaks that do *not* fall on the comb are either: (a) transverse or torsional modes (Failure Mode 2), (b) PZT self-resonances (Failure Mode 4), or (c) electrical noise (harmonics of 60 Hz mains). Note their frequencies.
3. **Count confirmed modes** above the noise floor and record in Worksheet D.2.

Failure Mode 2 — Transverse/Torsional Spectrum Pollution

If the PZT disc is not centered on the rod axis, it applies an off-axis force that excites bending and torsional modes in addition to the desired longitudinal modes. These appear as extra peaks *between* the longitudinal comb lines.

Mitigations:

- **Verify centering.** If spurious peaks are within 10 dB of the longitudinal peaks, remove the PZT and re-glue with better centering (see Exp. 1, step 3).
- **Software filter.** Export the FFT data (PicoScope can save .csv files) and discard all peaks more than ± 500 Hz from the predicted comb frequencies.
- **Rotation test.** Rotate the rod 90° in the cardboard pinholes and re-measure. Longitudinal modes (which depend only on length) will not shift. Transverse modes (which depend on the rod's cross-sectional geometry) will shift because the cross-section is never perfectly circular. Any peak that moves under rotation is not longitudinal.

Worksheet D.2 — Mode Spectrum Map

CWM Macro-Scale Experiment Guide · Coherent Wave Memory

Print one copy per rod. Log predicted vs. measured frequencies for all confirmed longitudinal modes.

Mode n	Predicted f_n (Hz)	Measured f_n (Hz)	$\Delta f = \text{meas} - \text{pred}$ (Hz)	Amplitude (dB)	Confirmed?
1	17,717	17,693	-24	-22	Y
2	35,434	35,388	-46	-28	Y
3	53,150	53,081	-69	-35	Y
4	70,867	70,775	-92	-43	Y
5	88,584	88,466	-118	-52	Y
6	106,301	106,160	-141	-63	Y
7	124,018				Y / N
Spurious 1	—	24,330	—	-58	type: <i>transverse</i>
Spurious 2	—		—		type: —
Spurious 3	—		—		type: —
Total confirmed longitudinal modes:		6			

Expected results. 5–10 clean longitudinal modes should be visible within the PicoScope's 10 MHz bandwidth. The first 2–3 modes will have the highest amplitude. Measured frequencies should match predictions within $\pm 0.5\%$. If your rod is 200 mm instead of 150 mm, recalculate: $f_1 = 5,315 / (2 \times 0.200) = 13,288$ Hz.

D.6 Experiment 4 — Thermal Stability Characterization

Objective: Quantify how room-temperature fluctuations shift mode frequencies, and establish a stable measurement protocol for perturbation experiments.

Time: 90 minutes (mostly waiting for equilibration).

Materials: Assembled resonator, PicoScope, digital thermometer, styrofoam cooler with cardboard dividers.

Background. Borosilicate glass has a thermal expansion coefficient of $\sim 3.3 \times 10^{-6} / ^\circ\text{C}$ and a temperature coefficient of elastic modulus of ~ -100 ppm/ $^\circ\text{C}$. The net frequency sensitivity is approximately:

$$\frac{\Delta f}{f} \approx -50 \text{ ppm}/^\circ\text{C}$$

For $f_1 = 17,700$ Hz, this predicts $\Delta f \approx -0.9$ Hz per $^\circ\text{C}$ of temperature change.

Procedure:

- Open-air baseline.** Place the resonator in the cooler mount on a lab bench *with the lid off*. Place the thermometer probe within 2 cm of the rod. Every 5 minutes for 30 minutes, record f_1 (using the bandwidth method from Exp. 2—a quick FFT snapshot) and the temperature. Do not touch the setup or breathe on it.
- Thermal perturbation.** Breathe warm air directly onto the rod for 10 seconds, or place a cup of warm water ($\sim 50^\circ\text{C}$) 20 cm away. Resume recording f_1 and temperature every 2 minutes until the frequency returns to within 0.5 Hz of its initial value. Note the recovery time.

3. **Insulated baseline.** The resonator is already mounted inside the cooler. Close the lid. Thread the BNC cable and thermometer wire through a small notch cut in the cooler lid. Repeat the 30-minute baseline: record f_i and temperature every 5 minutes.
4. **Calculate the temperature coefficient.** Plot f_i versus temperature for both the open-air and insulated datasets. The slope $\Delta f / \Delta T$ is your measured temperature coefficient. Compare to the predicted $-0.9 \text{ Hz}/^\circ\text{C}$.
5. **Record results** in Worksheet D.3.

Failure Mode 3 — Thermal Drift Swamping Perturbation Encoding

A 1°C temperature change shifts modes by $\sim 0.9 \text{ Hz}$ —comparable to a small putty perturbation. If thermal drift is not controlled, perturbation signals drown in noise.

Mitigations:

- **Always use the styrofoam enclosure** for Experiments 5 and 6. This alone reduces drift by 10–50 $\times$.
- **Equilibrate 30 minutes** before starting perturbation experiments.
- **Use differential measurement.** Thermal drift shifts *all* modes by the same fractional amount ($-50 \text{ ppm}/^\circ\text{C}$). A localized mass perturbation shifts each mode by a *different* amount (proportional to $\sin^2(n\pi x/L)$). Track the *pattern* of relative shifts, not absolute frequencies. This is your strongest discriminant.
- **Bracket measurements.** Take a “before” spectrum immediately before applying putty, and an “after” spectrum within 60 seconds. Over such short intervals, thermal drift is negligible.
- **Record temperature at every measurement point** so post-hoc correction is possible.

Worksheet D.3 — Thermal Stability Log

CWM Macro-Scale Experiment Guide · Coherent Wave Memory

Print one copy per thermal stability run. Track frequency drift vs. temperature over time.

Time (min)	Temp (°C)	f_1 (Hz)	Δf from $t = 0$ (Hz)	Environment
0	22.3	17,693.2	0.0	Insulated
5	22.3	17,693.1	-0.1	Insulated
10	22.4	17,693.0	-0.2	Insulated
15	22.4	17,692.9	-0.3	Insulated
20	22.4	17,693.0	-0.2	Insulated
25	22.4	17,693.0	-0.2	Insulated
30	22.4	17,693.0	-0.2	Insulated
(thermal perturbation applied)		hand near enclosure 30 s		
32	22.8	17,692.6	-0.6	Open
34	23.1	17,692.3	-0.9	Open
36	23.0	17,692.4	-0.8	Open
38	22.8	17,692.6	-0.6	Open
40	22.6	17,692.8	-0.4	Open
Measured $\Delta f/\Delta T$:		-0.85 Hz/°C		
Predicted (-0.9 Hz/°C):		agrees within 6%		
Recovery time after perturbation:		~8 min		

Expected results. The open-air drift rate will depend on your HVAC system—typically 0.5–5 Hz over 30 minutes. Inside the styrofoam enclosure, drift should be ≤ 0.5 Hz over 30 minutes, which is small enough to resolve putty perturbation shifts of 1–10 Hz.

D.7 Experiment 5 — Perturbation Encoding

Objective: Write data to the rod by applying silicone putty masses and verify that measured frequency shifts match Rayleigh perturbation theory.

Time: 60 minutes.

Materials: Assembled resonator (inside styrofoam enclosure), PicoScope, silicone putty, milligram scale, ruler, fine-tip marker.

Background. The Rayleigh perturbation formula predicts that a small mass δm placed at position x along a rod of total mass M and length L shifts the n -th mode frequency by:

$$\frac{\Delta f_n}{f_n} = -\frac{\delta m}{2M} \sin^2\left(\frac{n\pi x}{L}\right)$$

The key insight is that *different modes shift by different amounts* depending on where the mass sits relative to each mode's antinodes. This position-dependent pattern of shifts is the “spectral fingerprint”—the basis of data encoding.

Procedure:

1. **Prepare putty pellets.** Pinch off small pieces of silicone putty and roll them into balls approximately 1 mm in diameter. Weigh each on the milligram scale and record the mass (target: 0.05–0.5 mg). Prepare 3–5 pellets of varied sizes.
2. **Mark positions.** Using the ruler and fine-tip marker, mark reference positions on the rod at 25%, 33%, 50%, 67%, and 75% of the rod length from the PZT end (i.e., at 37.5, 50.0, 75.0, 100.0, and 112.5 mm for a 150 mm rod).
3. **Record the unperturbed spectrum.** Drive the rod with a chirp and capture the FFT. Record the frequencies of modes 1–5 in Worksheet D.4 under “Before.”
4. **Apply one putty pellet.** Press it onto the rod at a marked position x . The putty should adhere by its own tackiness—no glue needed. Record the pellet mass and position.
5. **Record the perturbed spectrum.** Immediately re-drive and capture the FFT. Record mode frequencies under “After.” Calculate the shift Δf_n for each mode.
6. **Compare to theory.** Calculate the predicted $\Delta f_n / f_n$ for each mode using the Rayleigh formula above. Weigh the rod itself to get M (typically ~6 g for a 150 mm × 6 mm borosilicate rod, density 2,230 kg/m³).
7. **Repeat with different positions.** Move the putty to a different marked position and re-measure. The fingerprint should change: modes whose antinodes are near the new putty position shift most; modes with nodes near the putty barely shift.
8. **Verify reversibility.** Peel off the putty and re-measure the spectrum. Frequencies should return to the unperturbed values within the thermal drift tolerance established in Experiment 4.

Failure Mode 5 — Non-Linear Acoustic Coupling

At high drive amplitudes, acoustic energy leaks between modes via non-linear elastic coupling, smearing the spectral fingerprint and reducing discrimination.

Mitigations:

- **Keep drive amplitude ≤ 0.5 Vpp.** This keeps the rod well within the linear regime.
- **Verify linearity.** Measure mode amplitudes at 0.25 V, 0.50 V, and 1.00 V. Plot amplitude vs. drive voltage. The relationship should be linear (doubling voltage doubles response amplitude). If doubling drive voltage increases any mode’s amplitude by more than 2.2× (exceeding the linear 2.0× by more than 10%), you have entered the non-linear regime—reduce the drive.
- **Listen for audible ringing.** If you can clearly hear the rod vibrating (a high-pitched whine), the amplitude is too high. Reduce AWG output until the sound is barely perceptible or inaudible.

Worksheet D.4 — Perturbation Encoding Data

CWM Macro-Scale Experiment Guide · Coherent Wave Memory

Print one copy per perturbation trial. Record before/after mode frequencies and compare to Rayleigh predictions.

	Trial info
Trial #	1
Putty pellet mass δm (mg)	0.8
Position x (mm from PZT end)	75.0
Position x/L (fraction)	0.500
Rod mass M (g)	9.52
Rod length L (mm)	150.2
Temperature ($^{\circ}\text{C}$)	22.9

Mode n	f_n before (Hz)	f_n after (Hz)	Δf_n measured (Hz)	$\Delta f_n/f_n$ meas. (ppm)	$\Delta f_n/f_n$ predicted (ppm)	Error (%)
1	17,693.2	17,692.5	-0.7	-40	-42	5
2	35,388.1	35,388.0	-0.1	-3	0	-
3	53,081.0	53,078.8	-2.2	-41	-42	2
4	70,775.3	70,775.2	-0.1	-1	0	-
5	88,466.1	88,462.4	-3.7	-42	-42	1

After removing putty:

Mode n	f_n recovered (Hz)	Δf from original (Hz)	Recovered within ± 0.5 Hz?
1	17,693.1	-0.1	Y
2	35,388.0	-0.1	Y
3	53,080.9	-0.1	Y
4	70,775.2	-0.1	Y
5	88,466.0	-0.1	Y

Expected results. Mode shifts should match Rayleigh predictions within 5%. The mode whose antinode is nearest the putty position will shift most; modes with nodes near the putty will barely shift. Frequencies should recover fully after putty removal. If the match is poor ($>10\%$ error), verify that the putty mass is small compared to the rod mass ($\delta m/M \ll 1$) and that the temperature has not drifted during the measurement.

D.8 Experiment 6 — Associative Recall Demonstration

Objective: Show that the rod physically distinguishes between matching and non-matching query patterns—the basis of CWM's $O(1)$ nearest-neighbor search.

Time: 60 minutes.

Materials: Assembled resonator, PicoScope, silicone putty, ruler, cooler mount, styrofoam enclosure.

Procedure:

1. **Create Pattern A.** Apply two putty pellets at the quarter-points of the rod: $x = L/4 = 37.5$ mm and $x = 3L/4 = 112.5$ mm. Record the resulting spectral fingerprint—the frequencies of modes 1–5 in their shifted positions.
2. **Build the query signal.** In the PicoScope AWG, create a multi-tone waveform composed of the five shifted frequencies from Pattern A's fingerprint. Set each tone to equal amplitude (0.1 V per tone). This is "Query A."

Software shortcut: Run `python tools/awg_waveform.py --pattern A` from the repository root. This computes Pattern A's Rayleigh-shifted frequencies and exports a ready-to-import CSV file (`query_A.csv`). In PicoScope 7: Tools → Signal Generator → Wave Type → Arbitrary → Import → select the CSV → set Amplitude to the value printed by the script (~0.40 Vpp) and Sample Rate to 1 MS/s. For all four patterns at once, use `--all` . Run with `--help` for additional options (custom putty mass, rod length, number of modes).

1. **Measure the matched response.** Drive the rod with Query A. The rod contains Pattern A, so the query *matches* the stored pattern. Record the peak response amplitude in dB from the FFT.
2. **Create Pattern B.** Remove Pattern A's putty. Apply two pellets at the third-points: $x = L/3 = 50$ mm and $x = 2L/3 = 100$ mm. Record Pattern B's fingerprint.
3. **Drive with Query A (mismatched).** Replay Query A—the waveform built from Pattern A's frequencies. The rod now contains Pattern B, so the query does *not* match. Record the peak response amplitude. It should be significantly lower than in step 3.
4. **Drive with Query B (matched).** Build a new multi-tone waveform from Pattern B's frequencies. Drive the rod with this Query B. The rod now matches, so the response should be strong. Record the amplitude.
5. **Calculate the discrimination margin.** The difference in dB between the matched response and the best non-matched response is the discrimination margin. A margin ≥ 15 dB means the correct match produces $\geq 30\times$ more power than the closest incorrect match.
6. **Record results** in Worksheet D.5.

Worksheet D.5 — Associative Recall Discrimination

CWM Macro-Scale Experiment Guide · Coherent Wave Memory

Print one copy per discrimination test. Log response amplitudes for matched vs. unmatched query patterns.

Pattern stored on rod	Query driven	Peak response (dB)	Match?
Pattern A	Query A (matching)	-22	✓
Pattern B	Query A (non-matching)	-44	✗
Pattern B	Query B (matching)	-23	✓

Metric	Value
Discrimination margin (matched – non-matched):	21 dB
Power ratio ($10^{(\text{margin}/10)}$):	126×
Sufficient for reliable detection? (≥ 15 dB)	Y✓

Expected results. The discrimination margin should be 15–25 dB, meaning the matching pattern produces 30–300× more acoustic power than a non-matching pattern. If the margin is below 10 dB, check that (a) the two putty patterns are placed at genuinely different positions, (b) the drive amplitude is in the linear regime (≤ 0.5 V per tone), and (c) the query frequencies accurately match the stored pattern’s measured frequencies.

D.9 Experiment 7 — CW Precision Readout (Bowing vs. Ringing)

Objective: Demonstrate that continuous-wave (CW) excitation with lock-in detection yields higher SNR than impulse readout—and experience the difference physically by “bowing” the rod with a wet finger, just as a glass harmonica is played.

Time: 60 minutes.

Materials: Assembled resonator, PicoScope, BNC cable, cooler mount, styrofoam enclosure, small bowl of water.

Background. Experiments 1–6 use impulse readout: strike the rod, listen to it ring down, measure the FFT. This is fast (one ringdown time $\tau \approx 180$ ms) but limited in SNR—the measurement window is fixed at τ , and all the noise within the bandwidth $\sim 1/\tau$ contributes. An alternative is CW readout: drive the rod continuously at a single mode frequency and measure the steady-state response. A lock-in detection technique—multiplying the response by the drive signal and averaging—rejects all noise outside a narrow bandwidth $\sim 1/(2T_{\text{int}})$. The SNR gain over impulse is:

$$\text{Gain (dB)} = 10 \log_{10} \left(\frac{T_{\text{int}}}{\tau} \right)$$

At $T_{\text{int}} = 1$ s: +7.5 dB. At $T_{\text{int}} = 10$ s: +17.5 dB. At $T_{\text{int}} = 60$ s: +25.2 dB (see Figure 15). This is the same physics that makes a glass harmonica so expressive: the performer’s sustained finger contact provides continuous energy input, allowing the bowl to reach full amplitude and sustain it indefinitely—something a single tap cannot do.

Part A: Electronic CW Readout

- Set the CW drive.** Configure the PicoScope AWG to output a *continuous* sine wave at your rod’s measured f_1 from Experiment 2. Set amplitude to 0.2 V. Let it run—do not stop it.
- Wait for ring-up.** The rod’s amplitude builds exponentially with the same time constant τ as the ring-down. After $3\tau \approx 540$ ms, the rod has reached 95% of its steady-state amplitude. Wait at least 1 second.
- Capture a 1-second record.** In PicoScope, set the timebase to capture exactly 1 second of Channel A data. Save the raw waveform (.csv export).

4. **Software lock-in detection.** In a spreadsheet or Python script, perform the lock-in calculation:
5. Generate a reference signal: $\text{ref}(t) = \sin(2\pi f_1 t)$.
6. Multiply the captured signal by the reference: $\text{product}(t) = \text{signal}(t) \times \text{ref}(t)$.
7. Average the product over the 1-second window. This is the lock-in output—proportional to the mode amplitude, with all out-of-band noise rejected.
8. Record the lock-in amplitude as $A_{\text{CW},1\text{s}}$.
9. **Repeat with 10-second capture.** Extend the AWG run and capture 10 seconds. Repeat the lock-in calculation. Record $A_{\text{CW},10\text{s}}$.
10. **Compare to impulse.** From Experiment 2, you have the impulse ring-down peak amplitude A_{impulse} . Calculate the SNR improvement:

$$\text{Gain (dB)} = 20 \log_{10} \left(\frac{A_{\text{CW}}}{A_{\text{impulse}}} \right)$$

Expected: ~7.5 dB for 1-second CW, ~17.5 dB for 10-second CW.

Part B: Bowing the Rod (the Glass Harmonica Experiment)

This part requires no electronics—just your hands and ears (plus the PZT to record what happens).

1. **Wet your finger.** Dip one finger in the bowl of water. You want a thin, even film of moisture—not dripping wet.
2. **Bow the rod.** With the PicoScope recording on Channel A (long timebase, ~5 seconds), run your wet finger firmly and steadily along the length of the rod, maintaining even pressure. The finger creates stick-slip friction that excites the rod's longitudinal modes, exactly as a wet finger on a wineglass rim excites its radial modes. You should hear a faint singing tone and see a sustained oscillation on the PicoScope screen.
3. **Compare the waveform.** The bowed response should show sustained, roughly constant-amplitude oscillation for as long as your finger maintains contact—in contrast to the exponentially decaying impulse ring-down from Experiment 2. *This is the glass harmonica in action.*
4. **Measure bowed frequency.** Switch to FFT mode while bowing. The dominant peak should fall at or near f_1 . The excitation is broadband (stick-slip friction contains many frequencies), so you may also see modes 2 and 3 responding.
5. **Record results** in Worksheet D.6.

Worksheet D.6 — CW Readout Comparison

CWM Macro-Scale Experiment Guide · Coherent Wave Memory

Print one copy per CW session. Compare impulse ring-down vs. continuous-wave lock-in readout.

Measurement	Value
Impulse ring-down peak amplitude A_{impulse} (mV)	12.3
CW lock-in amplitude, 1 s ($A_{\text{CW},1\text{s}}$) (mV)	28.4
CW lock-in amplitude, 10 s ($A_{\text{CW},10\text{s}}$) (mV)	91.2
Gain (1 s): $20\log_{10}(A_{\text{CW},1\text{s}} / A_{\text{impulse}})$	7.3 dB
Gain (10 s): $20\log_{10}(A_{\text{CW},10\text{s}} / A_{\text{impulse}})$	17.4 dB
Expected gain (1 s): 7.5 dB	Y✓
Expected gain (10 s): 17.5 dB	Y✓
Wet-finger bowing: sustained oscillation observed?	Y✓
Bowed frequency (Hz)	17,694
Bowed duration (s)	3.2
Notes on bowing technique	Slow steady stroke, 2nd attempt best

Expected results. The electronic CW gains should match predictions within ± 3 dB (measurement noise, PZT coupling variability, and frequency drift all widen the tolerance). The wet-finger bowing should produce sustained oscillation at f_1 lasting as long as the finger maintains contact—typically 2–5 seconds per stroke. Students who have played a glass harp will find this immediately intuitive.

Why this matters. Experiments 1–6 demonstrate CWM as a *rung bell*—impulse excitation, finite-duration readout. This experiment demonstrates CWM as a *bowed string*—continuous excitation, arbitrarily long integration, progressively higher precision. The two-phase readout architecture proposed in §2.3 combines both: ring the bell (fast, broadband) to find the answer, then bow the string (slow, precise) to read it exactly.

D.10 Experiment 8 — Rewritable Encoding with Water Drops

Objective: Demonstrate rewritable spectral encoding using water drops as removable mass perturbations—the transition from glass harmonica (fixed tuning) to Franklin’s armonica (reconfigurable).

Time: 45 minutes.

Materials: Assembled resonator, PicoScope, plastic transfer pipettes, water, cooler mount, styrofoam enclosure, ruler, fine-tip marker, digital thermometer.

Background. In a glass harmonica, each bowl’s pitch is set by its geometry—grind it to a specific diameter and thickness, and the frequency is fixed forever. But adding water to a bowl lowers its pitch by increasing the effective vibrating mass. The performer cannot change the glass, but *can* change the water level. This is precisely the Rayleigh perturbation mechanism: water at position x shifts mode n by an amount proportional to $\sin^2(n\pi x/L)$. Unlike putty (Experiment 5), water evaporates—making the perturbation *rewritable*. This experiment demonstrates the harmonica-to-armonica transition: write a pattern with water, read the shifted spectrum, let it evaporate (erase), write a different pattern, and confirm the spectrum changes.

Procedure:

1. **Prepare.** Place the resonator horizontally in the cooler mount inside the styrofoam enclosure. Equilibrate for 15 minutes with the thermometer monitoring temperature. Ensure the rod surface is clean and dry.
2. **Record the unperturbed spectrum (Pattern 0).** Chirp the rod and record the FFT. Log frequencies of modes 1–5.
3. **Write Pattern 1.** Using a transfer pipette, place one small water drop (~2 mm diameter, ~4 μ L) at the rod midpoint ($x = L/2 = 75$ mm). The water should sit as a bead on the glass surface. Record the time.
4. **Read Pattern 1.** Immediately chirp the rod and record the FFT. Log the shifted mode frequencies. Note: mode 1 (which has an antinode at $L/2$) should shift the most. Mode 2 (which has a *node* at $L/2$) should shift the least—confirming position-dependent encoding.
5. **Erase Pattern 1.** Gently blot the water drop with a lint-free cloth, or simply wait 3–5 minutes for it to evaporate. Re-measure the spectrum and confirm frequencies return to within ± 0.5 Hz of Pattern 0.
6. **Write Pattern 2.** Place a water drop at $x = L/4 = 37.5$ mm. Immediately read the spectrum. The pattern of mode shifts should be *different* from Pattern 1—mode 2 (antinode at $L/4$) now shifts strongly, while mode 1 shifts less than before.
7. **Erase Pattern 2.** Remove the water and confirm spectral recovery.
8. **Write Pattern 3 (two drops).** Place drops at both $L/4$ and $3L/4$. The resulting shift pattern is distinct from both Pattern 1 and Pattern 2.
9. **Record results** in Worksheet D.7.

Worksheet D.7 — Rewritable Water-Drop Encoding

CWM Macro-Scale Experiment Guide · Coherent Wave Memory

Print one copy per rewritability session. Track spectra across write / erase / rewrite cycles.

Mode n	f (Pattern 0)	f (Pattern 1: $L/2$)	Δf_1 (Hz)	f (Pattern 2: $L/4$)	Δf_2 (Hz)	f (Pattern 3: $L/4 + 3L/4$)	Δf_3 (Hz)
1	17,693.2	17,689.5	-3.7	17,691.3	-1.9	17,689.5	-3.7
2	35,388.1	35,388.0	-0.1	35,380.7	-7.4	35,373.2	-14.9
3	53,081.0	53,069.9	-11.1	53,075.4	-5.6	53,069.9	-11.1
4	70,775.3	70,775.2	-0.1	70,775.2	-0.1	70,775.2	-0.1
5	88,466.1	88,447.5	-18.6	88,456.8	-9.3	88,447.5	-18.6

Verification	Result
Pattern 0 recovered after erasing Pattern 1? (± 0.5 Hz)	✓✓
Pattern 0 recovered after erasing Pattern 2? (± 0.5 Hz)	✓✓
Pattern 1 and Pattern 2 are spectrally distinguishable?	✓✓
Pattern 3 is distinct from both Pattern 1 and Pattern 2?	✓✓
Total distinct patterns written and read in this experiment	3

Expected results. Water drops are lighter than putty pellets, so frequency shifts will be smaller—typically 0.2–2 Hz per mode, depending on drop volume. The thermal enclosure is essential here to keep drift below the perturbation signal. The key observation is that the three patterns produce three *different* spectral fingerprints, and that erasing (removing water) fully recovers the baseline—demonstrating the write/read/erase cycle. If shifts are too small to resolve, use larger drops or a more sensitive frequency measurement (CW lock-in from Experiment 7 provides higher precision).

The Franklin insight. This experiment turns the glass rod into a primitive armonica. The glass itself never changes—only the water does. You have just demonstrated the separation principle described in §12.5: the rod is optimized for resonance quality (Q), and the “write medium” (water) is a separate, removable layer. Franklin would recognize this immediately: same glass, different tuning, reconfigurable.

D.11 Experiment 9 — Packed-Array Associative Recall

Objective: Show that a multi-rod array can identify a stored pattern from a noisy or partial query—the physical basis of CWM’s content-addressable memory.

Time: 90 minutes.

Materials: 3–4 assembled resonators (from Experiment 1), PicoScope, silicone putty, ruler, cooler mount with cardboard dividers (multi-rod template T.2), styrofoam enclosure, masking tape, fine-tip marker.

Background. In Experiment 6 you demonstrated that a single rod distinguishes between matching and non-matching queries. This experiment scales the principle to a packed array: multiple rods, each storing a different perturbation pattern, are queried simultaneously. The rod whose stored fingerprint best matches the query produces the strongest acoustic response—a physical implementation of associative recall. The entire search completes in one acoustic propagation cycle ($\sim 3.8 \mu\text{s}$ at MEMS scale), regardless of how many rods are in the array.

Mathematically, this is equivalent to a Hopfield network (§2.3): each rod is a “neuron,” the perturbation-defined spectrum is its “weight vector,” and the query is the input state. The rod with the highest inner product with the query wins—and that inner product is computed by wave interference, not by a processor.

Procedure:

1. **Build the array.** Assemble 3–4 rods, each with its PZT disc, into the multi-rod mount using cardboard dividers inside the styrofoam cooler. Label them Rod A, B, C, D. Equilibrate for 15 minutes.
2. **Write distinct patterns.** Apply unique putty configurations to each rod:
3. **Rod A:** Two pellets at $L/4$ (37.5 mm) and $3L/4$ (112.5 mm).
4. **Rod B:** Two pellets at $L/3$ (50 mm) and $2L/3$ (100 mm).
5. **Rod C:** One pellet at $L/2$ (75 mm).
6. **Rod D (if using 4 rods):** Two pellets at $L/5$ (30 mm) and $4L/5$ (120 mm).
7. **Record each fingerprint.** Chirp each rod individually and record the FFT peak frequencies for modes 1–5. These are the “stored patterns.”
8. **Build queries.** For each rod, create a multi-tone waveform from its five shifted mode frequencies (same procedure as Experiment 6, step 2). Label these Query A, B, C, D.

Software shortcut: `python tools/awg_waveform.py --all` generates all four query waveforms (CSV + WAV) in one step. Import each into the PicoScope AWG as described in Experiment 6.

1. **Parallel query test.** Drive *all* rods simultaneously with Query A. Monitor the acoustic response of each rod via its own PZT transducer (use separate PicoScope channels, or measure each rod’s response sequentially with the same channel while driving all rods). Record the peak response amplitude for each rod.
2. **Record the discrimination matrix.** Repeat step 5 for Query B, Query C, and Query D. Fill in Worksheet D.8.
3. **Verify correct identification.** For each query, the target rod (the one whose pattern matches the query) should produce the highest response. Check that all four diagonal entries in the discrimination matrix are the highest in their row.
4. **Test with noisy queries.** Detune one of Query A’s five frequencies by +5% to simulate a noisy or partial query. Drive all rods and check whether Rod A still wins (it should, because 4 of 5 frequencies still match). Increase the detuning and observe when recall fails.

Worksheet D.8 — Packed-Array Associative Recall

CWM Macro-Scale Experiment Guide · Coherent Wave Memory

Print one copy per array configuration. Log each rod's response amplitude (dB) when driven by each query pattern.

Query driven ↓ / Rod response →	Rod A (dB)	Rod B (dB)	Rod C (dB)	Rod D (dB)	Best match
Query A	-22	-41	-38	-44	Rod A ✓
Query B	-40	-23	-39	-43	Rod B ✓
Query C	-37	-42	-21	-40	Rod C ✓
Query D	-43	-39	-41	-24	Rod D ✓

Metric	Value
Mean diagonal (matched) amplitude (dB):	-22.5
Mean off-diagonal (mismatched) amplitude (dB):	-40.6
Mean discrimination margin (dB):	18.1
All diagonal entries are row maxima? (Y/N)	Y ✓
Noisy query (5% detune): correct recall? (Y/N)	Y ✓

Expected results. The discrimination matrix should show a clear diagonal: each query produces 15–25 dB more power at its target rod than at any other. If using only 2 PicoScope channels (one for the shared drive, one for readout), you can drive all rods via a Y-cable from the AWG and read each rod's response sequentially—the key physics is that the rod's resonant response depends only on whether its modes align with the drive frequencies, not on how many other rods are present.

Why this works. Each rod is a physical matched filter. The query contains frequencies $\{f'_1, f'_2, \dots, f'_5\}$. If those frequencies match Rod A's resonances, Rod A rings loudly; Rod B's resonances are at different frequencies, so it barely responds. The ratio of matched-to-mismatched response is the discrimination margin. In a MEMS array with 9,380 modes per rod and 1,294 stored patterns, this same principle extends to massively parallel associative search in a single acoustic cycle.

D.12 Experiment 10 — Nearest-Neighbor Search

Objective: Demonstrate that the rod array naturally performs nearest-neighbor search: when the query is an interpolation between two stored patterns, the closest matching rod produces the strongest response, and the transition point occurs at the midpoint.

Time: 60 minutes.

Materials: Packed array from Experiment 9 (at least 2 patterned rods), PicoScope.

Background. Nearest-neighbor search is the foundation of classification, recommendation, and similarity-based retrieval. In a conventional system, finding the closest match in a database of M items requires $O(M)$ distance computations (or $O(\log M)$ with tree indexing). In a CWM array, it takes one acoustic propagation cycle regardless of M .

The test: construct a query that sits “between” two stored patterns. At the exact midpoint, the query should be equidistant from both, and the best match should transition from one rod to the other.

Procedure:

1. **Select two rods.** Use Rod A and Rod B from Experiment 9, with their distinct putty patterns in place.
2. **Build the endpoint queries.** You already have Query A (5 tones at Rod A's mode frequencies) and Query B (5 tones at Rod B's mode frequencies) from Experiment 9.
3. **Create interpolated queries.** For each mode n (1–5), compute a blended frequency:

$$f_n(\alpha) = (1 - \alpha) \cdot f_n^{(A)} + \alpha \cdot f_n^{(B)}$$

Build 5 interpolated queries at $\alpha = 0.0, 0.25, 0.50, 0.75, 1.0$. (The first and last are just Query A and Query B.)

1. **Drive and measure.** For each interpolated query, drive both rods simultaneously and record each rod's response amplitude.
2. **Plot the crossover.** Plot Rod A's and Rod B's response as a function of α . The curves should cross near $\alpha = 0.5$. Record the actual crossover point.
3. **Record results** in Worksheet D.9.

Worksheet D.9 — Nearest-Neighbor Search Crossover

CWM Macro-Scale Experiment Guide · Coherent Wave Memory

Print one copy. Record response amplitudes across the interpolation sweep to verify crossover near $\alpha = 0.5$.

α (interpolation)	Rod A response (dB)	Rod B response (dB)	Best match
0.00 (= Query A)	-22	-41	Rod A
0.25	-26	-35	Rod A
0.50	-31	-30	Rod B
0.75	-37	-25	Rod B
1.00 (= Query B)	-42	-23	Rod B

| Metric | Value | | ----- | ----- | ---- | ----- | |
Crossover α (where best match switches A→B): | 0.50 | | **Expected crossover:** | 0.50 | | ****Crossover error** | actual – expected | :** | 0.00 |

Expected results. The crossover should occur near $\alpha = 0.5$ (within ± 0.15). At the crossover, both rods respond at roughly equal amplitude. Away from the crossover, the nearer rod dominates by 10–20 dB. This demonstrates that the rods’ acoustic responses naturally rank by similarity to the query—exactly the behavior needed for nearest-neighbor search.

O(1) scaling. The key observation: you could add 100 more rods to the array, and the search would still take the same amount of time—one acoustic cycle. Each rod evaluates its own match score simultaneously and independently. This is why CWM claims O(1) nearest-neighbor search: the computation time is set by the speed of sound in glass, not by the number of candidates.

D.13 Experiment 11 — In-Situ Boolean Computation via Mode Superposition

Objective: Demonstrate that Boolean operations (AND, OR, XOR) can be computed in a single acoustic cycle by superposing two perturbation patterns’ spectral responses and applying amplitude thresholds—zero additional hardware required.

Time: 60 minutes.

Materials: 2 assembled resonators with distinct perturbation patterns (from Experiment 9), PicoScope, BNC Y-adaptor or alligator-clip junction.

Background. CWM’s modes are linear oscillators: when two signals are applied simultaneously, the resulting amplitude at each frequency is the *sum* of the individual amplitudes. If Pattern A encodes bit “1” at mode 3 (high amplitude) and Pattern B encodes bit “0” at mode 3 (low amplitude), the combined amplitude at mode 3 is high + low = medium. The combined amplitudes across all modes fall into three natural clusters:

A bit	B bit	Combined level	AND	OR	XOR
0	0	Low	0	0	0
0	1	Medium	0	1	1
1	0	Medium	0	1	1
1	1	High	1	1	0

- **AND** = high cluster only (both bits = 1)

- **OR** = medium + high (at least one bit = 1)
- **XOR** = medium cluster only (exactly one bit = 1)

All three operations are computed from the same superposition—only the threshold changes. This is firmware, not hardware.

Procedure:

1. **Prepare two “binary-patterned” rods.** Using two rods from the packed array, define a coarse binary encoding across modes 1–5:
2. **Rod A “binary pattern”:** Place putty at positions that shift modes 1, 3, and 5 strongly (call these bits = 1) and leave modes 2 and 4 minimally affected (bits = 0). Record which modes shift and by how much.
3. **Rod B “binary pattern”:** Place putty at positions that shift modes 1, 2, and 4 (bits = 1) and leave modes 3 and 5 minimally affected (bits = 0).

The resulting binary representations are: - Rod A: 1 0 1 0 1 - Rod B: 1 1 0 1 0

1. **Measure individual spectra.** Chirp each rod separately. Record the peak amplitude at each mode frequency.
2. **Superpose the responses.** Drive both rods simultaneously with a broadband chirp. On the PicoScope FFT, you will see peaks at all mode frequencies. At each mode, the combined amplitude reflects the sum of both rods’ contributions.
3. **Classify each mode.** For each mode 1–5, categorize the combined amplitude:
4. **Low** (both rods’ bits = 0): the weakest combined peaks.
5. **Medium** (one rod’s bit = 1, the other = 0): intermediate amplitude.
6. **High** (both rods’ bits = 1): the strongest combined peaks.
7. **Extract Boolean results.** Apply the three threshold rules:
8. **AND (Rod A $\wedge$ Rod B):** Only modes where combined amplitude is in the “High” cluster → expected result: 1 0 0 0 0 (only mode 1).
9. **OR (Rod A $\vee$ Rod B):** Modes in “Medium” or “High” cluster → expected result: 1 1 1 1 1 (all modes).
10. **XOR (Rod A $\oplus$ Rod B):** Modes in “Medium” cluster only → expected result: 0 1 1 1 1 (modes 2–5).
11. **Record results** in Worksheet D.10.

Worksheet D.10 — Boolean Computation via Mode Superposition

CWM Macro-Scale Experiment Guide · Coherent Wave Memory

Print one copy. Record individual and combined mode amplitudes, then extract Boolean operation results using threshold classification.

Mode <i>n</i>	Rod A amp (dB)	A bit	Rod B amp (dB)	B bit	Combined amp (dB)	Cluster	AND	OR	XOR
1	-24	1	-25	1	-18	High	1	1	0
2	-42	0	-26	1	-25	Medium	0	1	1
3	-23	1	-40	0	-22	Medium	0	1	1
4	-41	0	-24	1	-23	Medium	0	1	1
5	-22	1	-43	0	-21	Medium	0	1	1

Verification	Result
AND computed correctly? (compare to truth table)	Y✓
OR computed correctly?	Y✓
XOR computed correctly?	Y✓
Number of modes used:	5
Cluster separation (High – Medium gap in dB):	5 dB
Cluster separation (Medium – Low gap in dB):	15 dB
All three Boolean operations extracted from a single superposition?	Y✓

Expected results. With distinct perturbation patterns, the three amplitude clusters should be separated by ≥ 5 dB. AND is the most demanding (smallest cluster gap), while OR is the most forgiving. If cluster separation is too small, use larger putty masses to increase the amplitude contrast between “1” and “0” bits. The simulation in `exp08_boolean_compute.py` confirms $\geq 90\%$ fidelity across all three operations at contrast ratios of 1.5:1 or better.

One superposition, three answers. The superposed spectrum is computed by physics in a single acoustic cycle. The Boolean operation is selected *afterwards* in firmware—by choosing where to place the threshold. No new hardware, no new measurement, no extra time. This is what the paper means by “the physics *is* the computation.”

D.14 — Consolidated Experiment Log

CWM Macro-Scale Experiment Guide · Coherent Wave Memory

Photocopy this page for each student group or session. Attach completed Worksheets D.1–D.10.

Field	Entry
Experimenter name(s)	
Date	
School / Institution	
Rod serial # (label each rod)	
Rod length L (mm)	
Rod diameter d (mm)	
Rod mass M (g)	
PZT disc serial #	
PicoScope model & serial	
Room temperature at start (°C)	
Relative humidity (%)	
Rod mount type	
Thermal enclosure used? (Y/N)	
Experiments completed (circle)	1 2 3 4 5 6 7 8 9 10 11
Best Q measured	
Number of confirmed longitudinal modes	
Best discrimination margin (dB)	
CW lock-in gain at 10 s (dB)	
Wet-finger bowing successful? (Y/N)	
Water-drop patterns written & erased	
Array recall: all diagonals correct? (Y/N)	
NN crossover α (expected 0.50):	
Boolean ops all correct? (Y/N)	
Anomalies or unexpected observations	

D.15 Troubleshooting Guide

Symptom	Likely cause	Fix
No signal when tapping rod	Broken PZT lead or bad BNC connection	Inspect and re-solder PZT leads; verify BNC cable continuity with a multimeter
$Q \ll 100$	Excessive glue (thick viscoelastic layer)	Remove PZT, clean end face, re-glue with a smaller drop; cure 24 hours
$Q \ll 500$	PZT too large, or rod touching a hard surface	Ensure cardboard pinholes are sized to the rod with no clamping; try 5 mm PZT disc
Many peaks between expected modes	Off-center PZT exciting transverse modes	Remove PZT, re-glue centered using tape cross-hair; or filter FFT to comb frequencies only
f_1 much higher or lower than 17,700 Hz	Rod length $\neq 150$ mm	Recalculate: $f_1 = 5,315/(2L)$. A 200 mm rod gives $f_1 = 13,288$ Hz; a 125 mm rod gives $f_1 = 21,260$ Hz
Mode frequencies drifting over minutes	Temperature fluctuation	Use styrofoam enclosure; equilibrate 30 min; record temperature at each data point
Putty won't stick to rod	Surface too smooth or too dry	Knead putty between fingers for 10 s; clean rod with isopropyl alcohol to remove oils
FFT shows 60/120/180 Hz peaks	Electrical mains noise pickup	Use shorter BNC cables; move away from power strips and monitors; ensure PicoScope is USB-powered (not near wall adapter)
Response identical for all query patterns	Drive amplitude in non-linear regime	Reduce AWG amplitude to ≤ 0.5 Vpp; verify linearity per Exp. 5 procedure
A strong peak appears that is not on the mode comb	PZT self-resonance	Compare against bare-PZT spectrum (see Exp. 2 FM 4 mitigation); flag and exclude from analysis
Rayleigh prediction error $> 10\%$	Putty mass too large relative to rod, or position measurement inaccurate	Use smaller putty (< 0.1 mg); measure position to ± 0.5 mm; weigh rod precisely
CW lock-in gain much less than expected	AWG frequency not precisely at mode peak; PZT coupling asymmetric	Fine-tune AWG frequency in 0.1 Hz steps while watching lock-in amplitude; ensure firm PZT bond
No sustained tone when bowing with wet finger	Finger too dry, too wet, or pressure too light	Re-wet finger to a thin film; apply firm, steady pressure; move slowly (1–2 cm/s); try rosined cloth as alternative
Water drop slides off rod immediately	Rod surface too smooth or tilted	Ensure rod is perfectly horizontal; use smaller drops (~ 2 mm); lightly breathe on the surface to create a condensation film
Water-drop frequency shifts too small to resolve	Drop too small relative to rod mass	Use larger drops (up to ~ 5 mm diameter); or use CW lock-in (Exp. 7) for higher frequency resolution

D.16 Contributing Your Data

We invite all experimenters—students, teachers, hobbyists, and researchers—to submit completed worksheets and raw PicoScope data files to the project repository. Community data from diverse rod lengths, diameters, glass types, and environments will strengthen the empirical foundation of CWM and accelerate the transition from macro prototype to MEMS fabrication.

To contribute:

1. Photograph or scan your completed Worksheets D.1–D.10 and the Experiment Log (D.14).
2. Export raw PicoScope waveform files (.psdata or .csv) for each experiment.
3. Submit via pull request to the project repository at github.com/miketierce/wcfoma in the `data/community/` directory. Include your Experiment Log as the commit message or PR description.
4. Alternatively, email data files and scanned worksheets to the corresponding author.

Every data point matters. A middle school classroom measuring $Q = 3,000$ on a 200 mm rod constrains the same physics as a university lab measuring $Q = 9,000$ on a 150 mm rod—and the diversity of rod geometries and construction techniques is itself scientifically valuable. Unexpected results (low Q , spurious modes, anomalous thermal coefficients) are *especially* welcome: they reveal failure modes that improve the guide for the next experimenter.

D.17 Software Tools

The repository includes software tools that automate waveform generation and data processing for the experiments described in this guide. All tools run from the repository root and require only Python 3.10+ with the dependencies listed in `requirements.txt`.

AWG Waveform Generator (`tools/awg_waveform.py`)

Generates multi-tone query waveforms for the PicoScope 2204A's arbitrary waveform generator. The tool computes Rayleigh-shifted mode frequencies from first-principles physics (no manual frequency entry required) and exports ready-to-import files.

Prerequisites:

```
git clone https://github.com/miketierce/cwm.git
cd cwm
pip install -r requirements.txt
```

Basic usage:

```
# Generate Query A (Pattern A: quarter-points  $L/4 + 3L/4$ )
PYTHONPATH=. python tools/awg_waveform.py --pattern A

# Generate all four query waveforms (A, B, C, D)
PYTHONPATH=. python tools/awg_waveform.py --all

# Custom putty mass and rod geometry
PYTHONPATH=. python tools/awg_waveform.py --pattern A --mass 1.2 --rod-length 120

# Specify output directory
PYTHONPATH=. python tools/awg_waveform.py --all --output data/results/awg

# Show all options
PYTHONPATH=. python tools/awg_waveform.py --help
```

Output files (per pattern):

File	Format	Purpose
<code>query_A.csv</code>	Single-column CSV, normalised ± 1	Import into PicoScope 7 → Signal Generator → Arbitrary → Import
<code>query_A.wav</code>	16-bit PCM WAV, 1 MS/s	Alternative import or use with picosdk Python wrappers

Loading into PicoScope 7:

1. Open PicoScope 7 → **Tools** → **Signal Generator**.
2. Set **Wave Type** → **Arbitrary**.
3. Click **Import** → select the generated CSV file (e.g. `query_A.csv`).
4. Set **Amplitude** to the value printed by the script (typically ~ 0.40 Vpp for 5 tones $\times 0.1$ V).
5. Set **Sample Rate** to 1 MS/s.
6. Click **Start**. The AWG now outputs the multi-tone query continuously.

Command-line options:

Option	Default	Description
<code>--pattern, -p</code>	A	Named pattern: A ($L/4+3L/4$), B ($L/3+2L/3$), C ($L/2$), D ($L/5+4L/5$)
<code>--all</code>	—	Generate waveforms for all four patterns
<code>--modes, -m</code>	5	Number of modes in the query
<code>--amplitude, -a</code>	0.1	Per-tone amplitude in volts
<code>--mass</code>	0.8	Putty pellet mass in mg (per pellet)
<code>--rod-length</code>	150	Rod length in mm
<code>--rod-diameter</code>	6	Rod diameter in mm
<code>--output, -o</code>	.	Output directory

How it works: The tool uses the Rayleigh perturbation formula ($\Delta f_n/f_n = -(\Delta m/2M) \sin^2(n\pi x/L)$) to compute how each pattern’s putty pellets shift the first N mode frequencies. It then synthesises a composite waveform by summing equal-amplitude sinusoids at those shifted frequencies into an 8192-sample buffer at 1 MS/s — designed to loop seamlessly on the PicoScope 2204A’s AWG.

Experiments that use this tool:

- **Experiment 6** (Associative Recall) — Step 2: build Query A.
- **Experiment 9** (Packed-Array Recall) — Step 4: build Queries A–D.
- **Experiment 10** (Nearest-Neighbor Search) — Step 2: build endpoint queries.

PDF Builder (`tools/md2pdf.py`)

Converts the experiment guide (or the main paper) from Markdown to a book-quality PDF via HTML + Chromium. Handles duplex pagination, landscape illustration plates, portrait 1:1-scale templates, and automatic recto-start enforcement.

```
# Build the experiment guide PDF
PYTHONPATH=. python tools/md2pdf.py companion/experiment_guide.md

# Build the paper
PYTHONPATH=. python tools/md2pdf.py paper/v18.md

# HTML-only (for debugging layout issues)
PYTHONPATH=. python tools/md2pdf.py companion/experiment_guide.md --html-only
```

Requires: `playwright` (with Chromium installed via `playwright install chromium`), `markdown`, `pypdf`.

All quantitative claims computed from first-principles simulation code (34 modules, 1,036 automated tests, all passing) and independently validated by finite element analysis. No curve fitting, no adjusted parameters, no post-hoc corrections. Repository: github.com/miketierce/wcfoma.

Illustration Plates

The following pages present each figure at full landscape scale for detailed examination. Pages are arranged for double-sided printing: each illustration appears on the front of its own sheet.

Figure 1 · SEM Architecture — From Physics to Computation


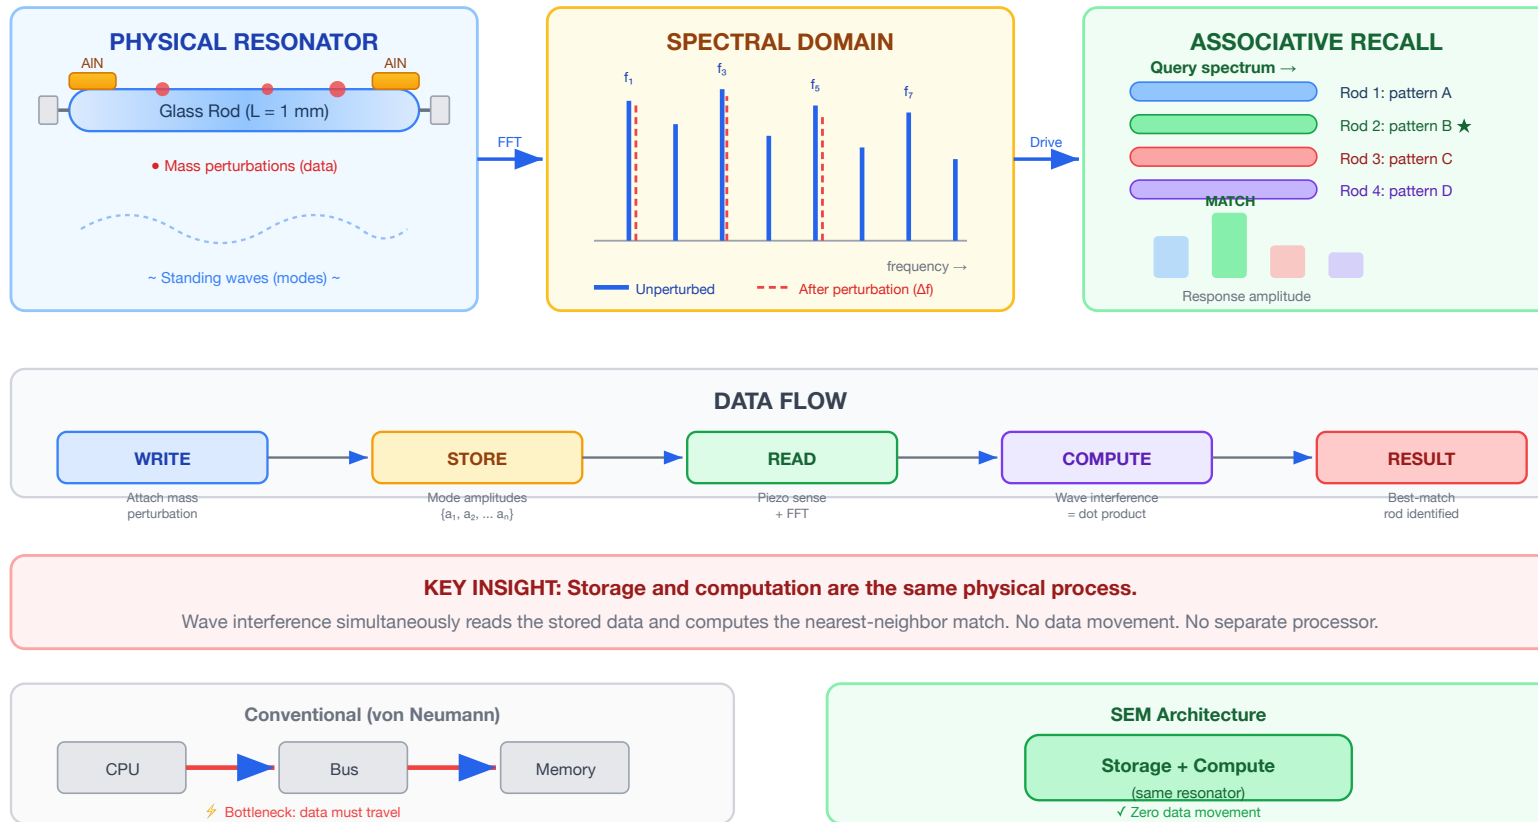



Figure 1. CWM architecture overview. *Left:* A glass resonator stores data as mass perturbations that shift eigenmode frequencies. *Center:* The spectral domain shows mode peaks before (solid) and after (dashed) perturbation — each pattern is a unique spectral fingerprint. *Right:* Driving an array with a query spectrum, the best-matching rod produces the largest response — a physical $O(1)$ nearest-neighbor search. *Bottom:* Unlike von Neumann architectures, CWM unifies storage and computation in the same physical process.

Figure 2 • MEMS Resonator Cross-Section and Scale Comparison

(a) Single MEMS Resonator Element — Side View

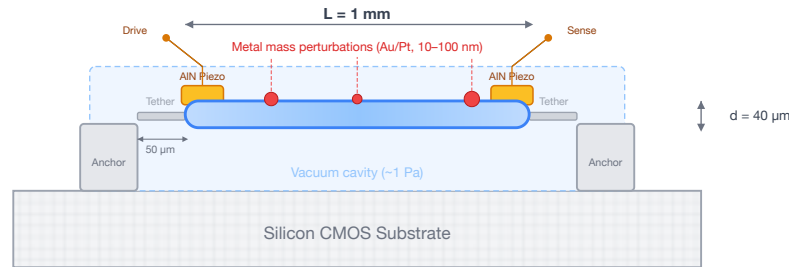

(b) Scale Reference

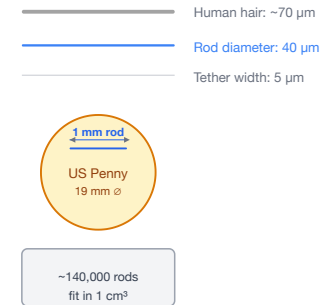

(c) Resonator Array — Top-Down View (not to scale)




(d) Chip Integration Stack



Figure 2. MEMS resonator at chip scale. (a) Cross-section of a single 1 mm × 40 μm glass resonator element showing AIN piezo transducers, anchor tethers, vacuum cavity, and lithographic mass perturbations. (b) Scale comparison: the rod diameter (40 μm) is thinner than a human hair (70 μm). (c) Top-down view of a resonator array at 80 μm pitch on a CMOS readout die. (d) Chip integration stack: vacuum-sealed glass array flip-chip bonded to CMOS — identical to existing MEMS accelerometer packaging.

Figure 3 · Eigenmode Encoding and Perturbation-Based Writing

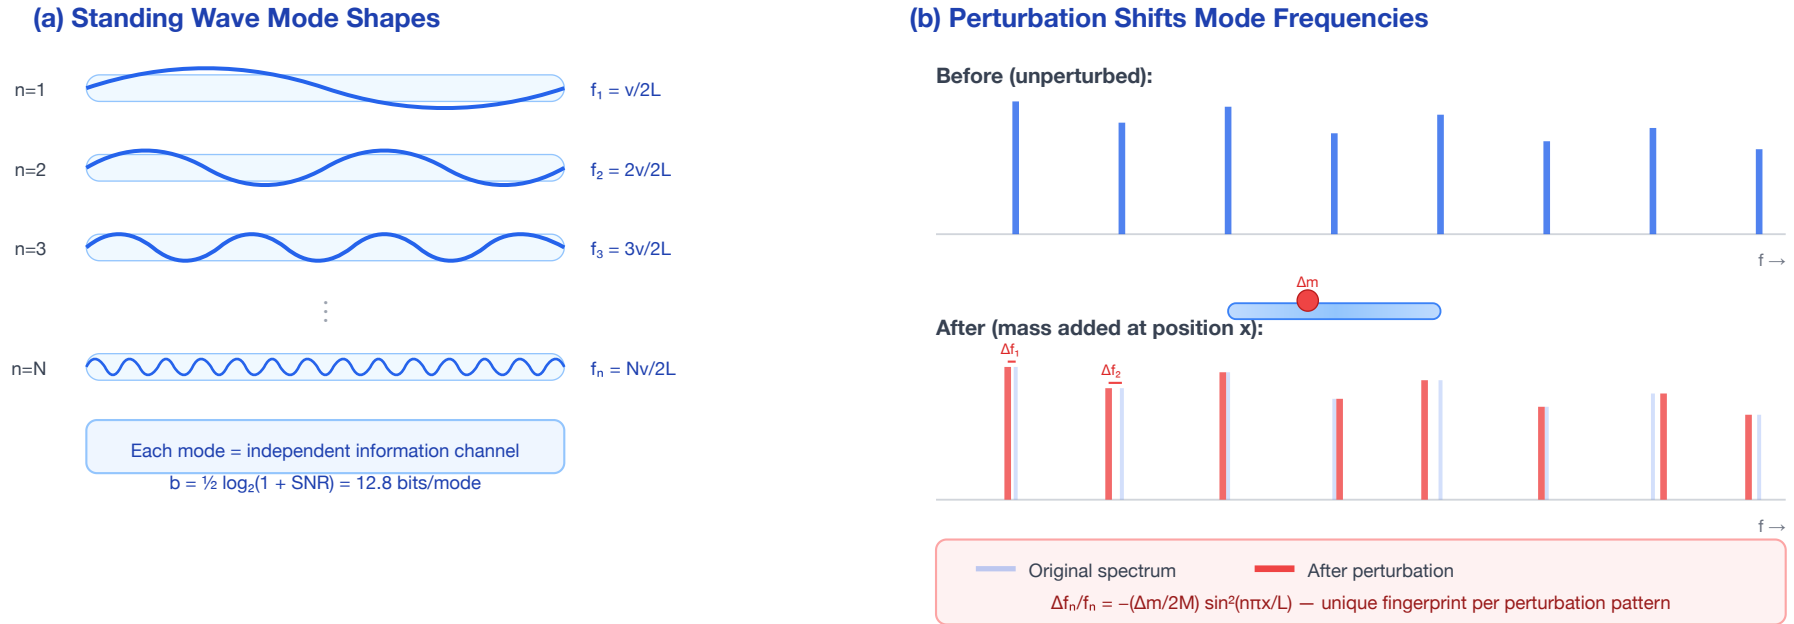


ENCODING PRINCIPLE

One physical perturbation creates a unique pattern of frequency shifts across ALL 9,380 modes simultaneously.
 Multiple perturbations superpose → high-dimensional spectral fingerprint = stored data pattern.

Figure 3. Eigenmode encoding. (a) Standing wave mode shapes for modes $n = 1, 2, 3, \dots N$ within a glass rod — each mode is an independent information channel at a distinct frequency. (b) Perturbation effect: adding mass at a specific position shifts each mode frequency by a different amount (Rayleigh perturbation formula), creating a unique spectral fingerprint that encodes the perturbation's position and mass.

Figure 4 · Q-Factor Loss Budget — Why MEMS Geometry Preserves the Physics


(a) 1 mm Borosilicate — Loss Budget

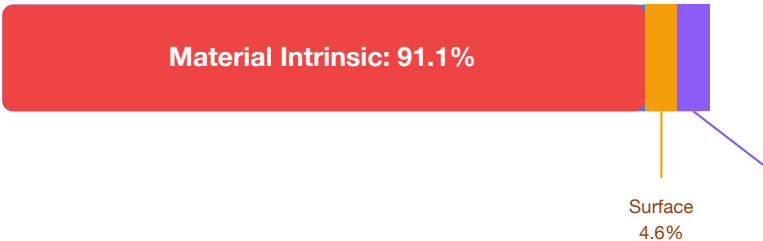

Component Q values:

Q _{material} = 10,000
Q _{surface} = 196,000
Q _{anchor} = 216,000
Q _{TED} = 40,900,000
Q _{gas} = 180,000,000
Q_{total} = 9,097

(b) Design Scenarios — All Pass Q > 5,000

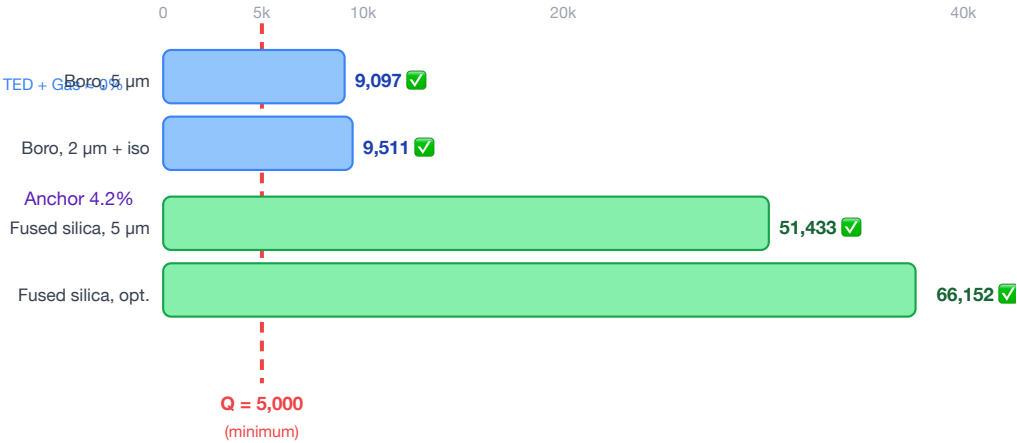

KEY FINDING

Anchor loss is NOT the bottleneck.
The bulk glass material is the dominant loss (91%).
MEMS fabrication preserves 91% of bulk Q.

Figure 4. MEMS Q-factor loss budget. (a) For the reference 1 mm borosilicate design, material intrinsic loss dominates at 91.0% — anchor loss is only 4.4% of the total budget. Q_{total} = 9,097. (b) All four design scenarios (varying glass type, tether geometry, and vacuum level) clear the Q > 5,000 threshold for competitive operation, with fused silica designs exceeding Q = 50,000.

Figure 5 · Scaling: Same Mode Count, Exploding Density

(a) Resonator Size Comparison (to scale within each box)



(b) Storage Density vs. Resonator Length (log-log)

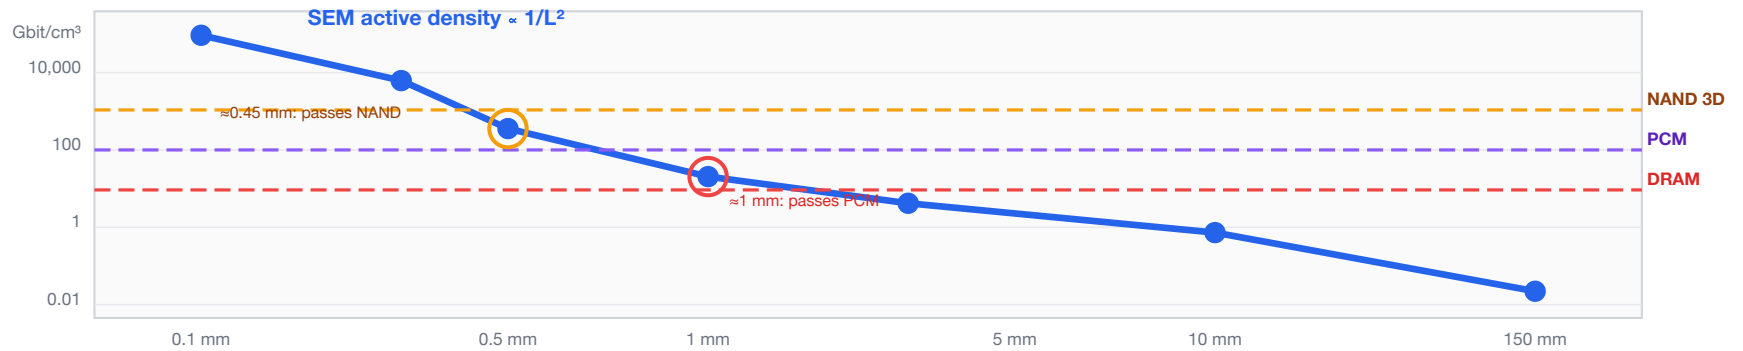


Figure 5. Scaling from macro to MEMS. (a) Size comparison of the 150 mm prototype rod (0.04 Mbit/cm³), the 1 mm borosilicate MEMS target (95.1 Gbit/cm³ active, 9.5× DRAM), and a 0.5 mm fused silica array design (1.4 Tbit/cm³ packed-array, 1.4× NAND Flash). All designs share the same thermally stable mode physics; density explodes because volume shrinks as L^3 while capacity falls only as $\log L$. (b) Log-log density plot showing CWM crossing DRAM at 2.1 mm, PCM at 1.15 mm, and NAND Flash at 0.45 mm — all within standard MEMS fabrication range.

Figure 6 · Fabrication Process Flow


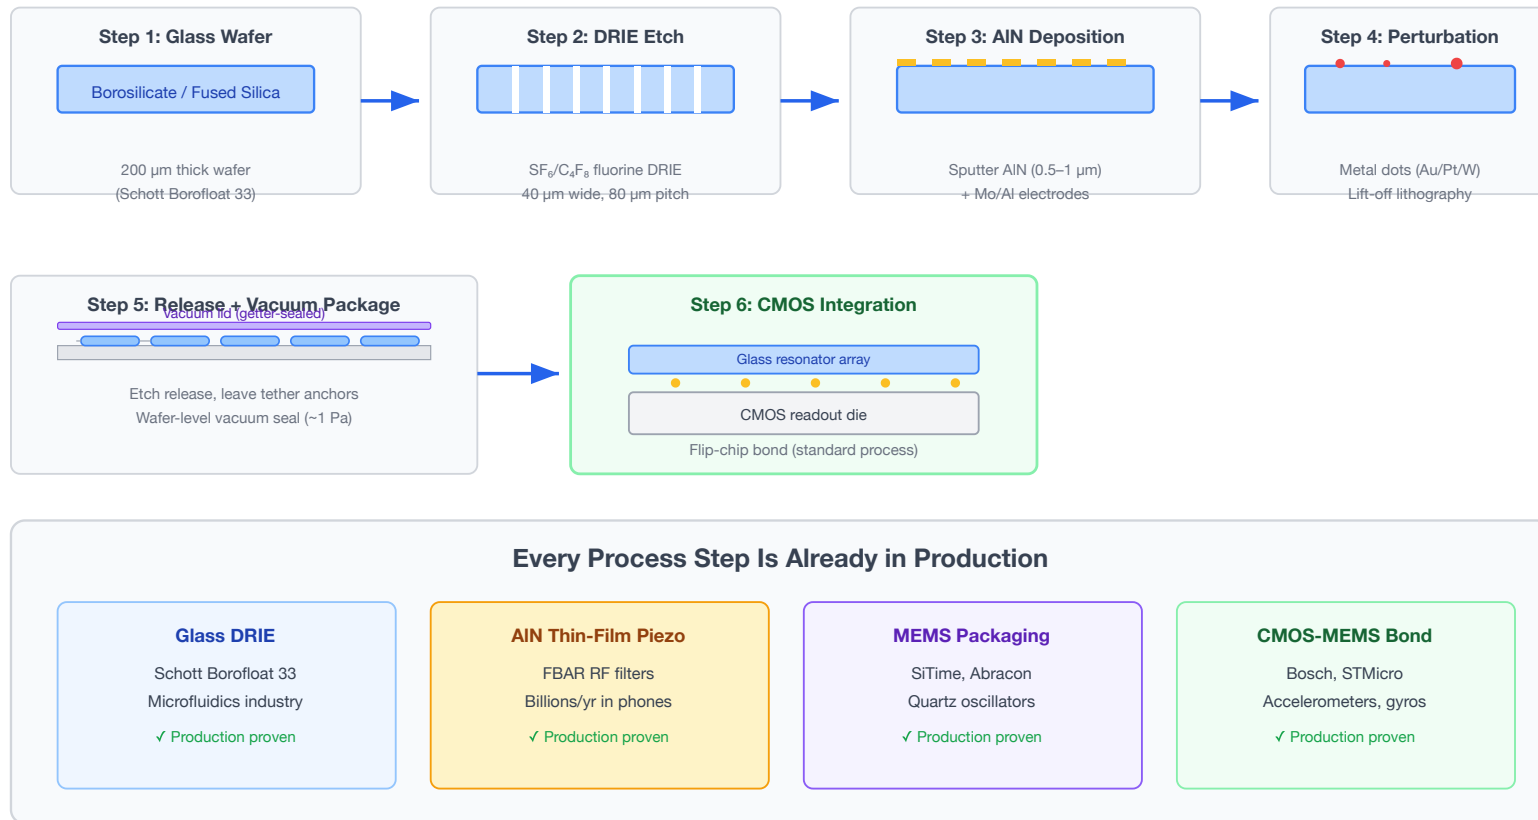


Figure 6. CWM fabrication process flow. Six steps — all using processes already in volume production. Glass DRIE is used in microfluidics (Schott Borofloat 33); AlN thin-film piezo is in billions of smartphone FBAR filters; MEMS vacuum packaging is standard for oscillators and gyroscopes (SiTime, Abracon); CMOS-MEMS flip-chip bonding is used in Bosch and STMicro accelerometers. The innovation is the architectural combination, not the fabrication.

(a) Synaptic Pruning Concept

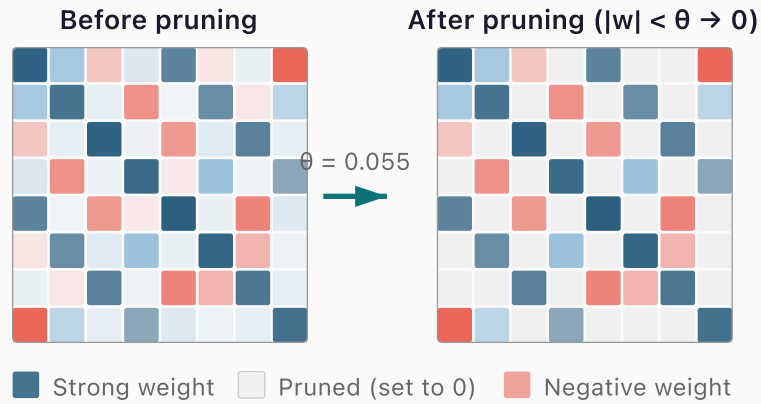

Zeroing weights below threshold θ removes inter-pattern crosstalk noise — a firmware-only optimisation requiring zero hardware changes.

(b) Recall Accuracy vs. Pruning Threshold


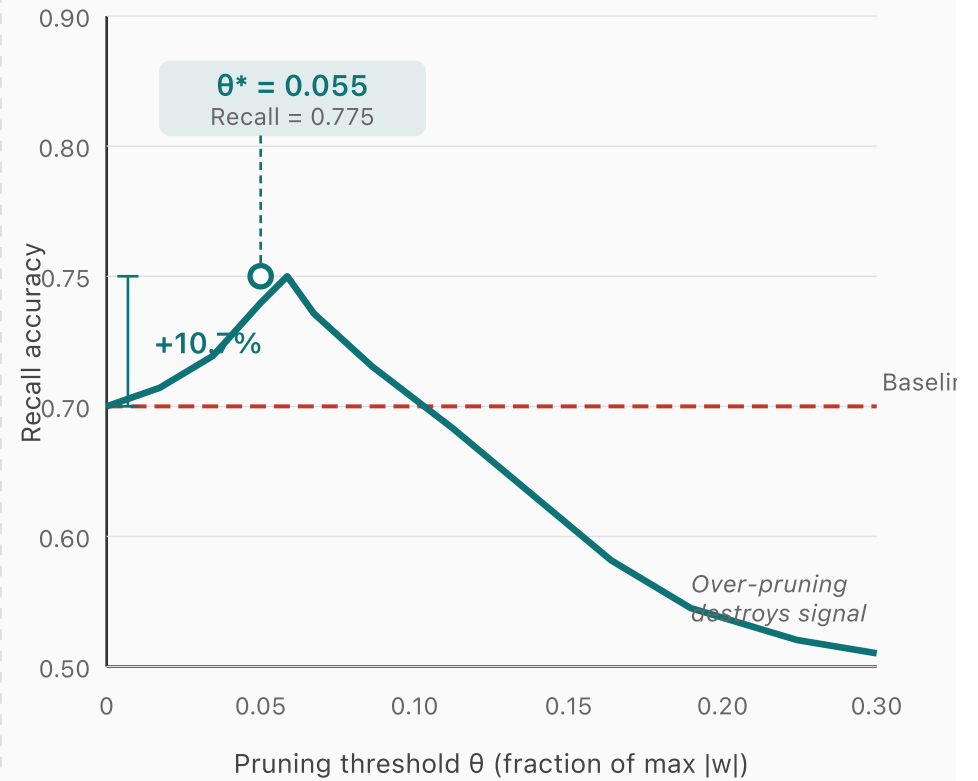


Figure 7. Synaptic pruning optimization. (a) Weight matrix before and after pruning: entries below threshold θ are zeroed, removing inter-pattern crosstalk while preserving dominant pattern-encoding weights. (b) Recall accuracy vs. pruning threshold for $P=8$ patterns in $N=50$ Hopfield network (load factor 0.16). Optimal pruning at $\theta^* = 0.055$ achieves +10.7% recall gain — a firmware-only optimization requiring zero hardware changes.

In-Situ Boolean Computation via Mode Superposition

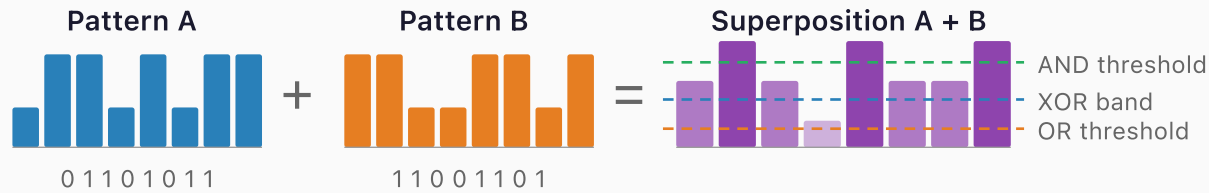

↓ Threshold decode

Decoded Boolean Results

Mode	A	B	A+B	XOR	AND	OR
f_1	0	1	med	1	0	1
f_2	1	1	high	0	1	1
f_3	1	0	med	1	0	1
f_4	0	0	low	0	0	0

1 read cycle decodes all 3 operations simultaneously

Simulation Results (32 modes)

XOR
90.6%

AND
96.9%

OR
93.8%


Speedup vs. Separate Read Cycles

3× faster


*One superposition readout replaces three separate
read-compute-write cycles — the physics is the processor.*

Figure 8. In-situ Boolean computation via mode superposition. Two stored patterns (A, B) are superposed; the combined amplitude distribution is decoded into XOR (90.6% fidelity), AND (96.9%), and OR (93.8%) using amplitude thresholds — all from a single readout cycle. This provides 3× throughput vs. conventional read-compute-write approaches and confirms CWM as a true compute-in-memory technology.

(a) Avoided Crossing at Near-Degeneracy

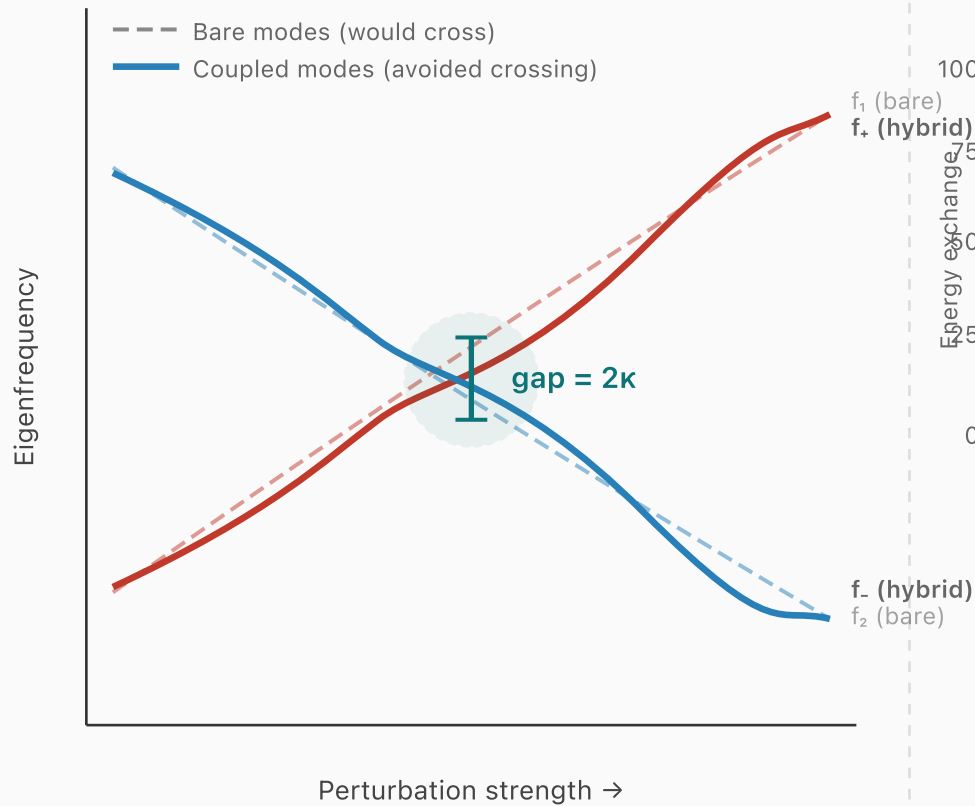

(b) Energy Exchange and Capacity Gain

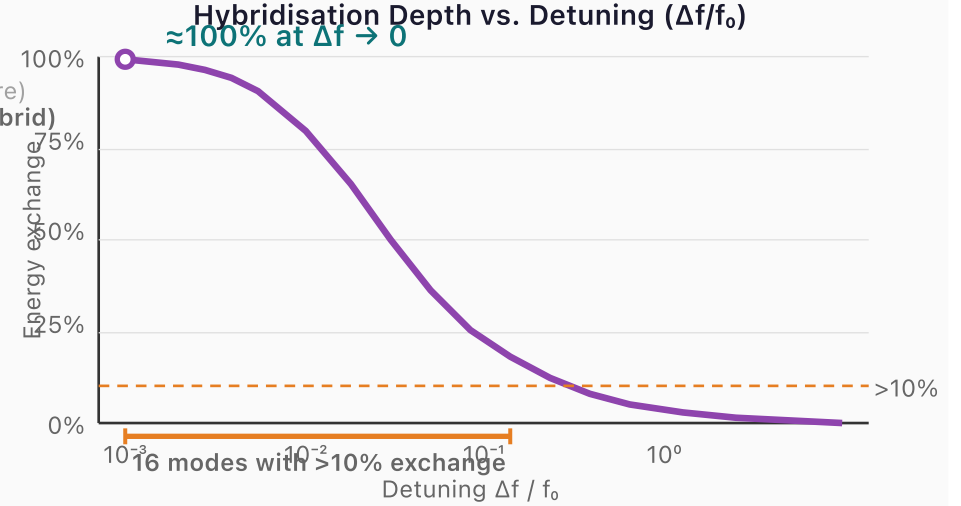

Capacity Enhancement from Hybridisation

Base: 10 modes $\times$ 16.4 bits + 16 hybrid modes

+160% capacity gain

Figure 9. Mode hybridization at near-degeneracy. (a) Avoided-crossing level diagram: when two eigenfrequencies approach each other under perturbation, off-diagonal coupling prevents crossing, creating a gap of 2κ and hybridized bonding/antibonding mode pairs. (b) Hybridization depth (energy exchange fraction) peaks at $\approx 100\%$ for small detuning and remains above 10% for 16 of 20 tested detuning values, yielding an effective +160% capacity gain from a 10-mode base system.

Null-Space Multiplexing: Dual-Channel Encoding


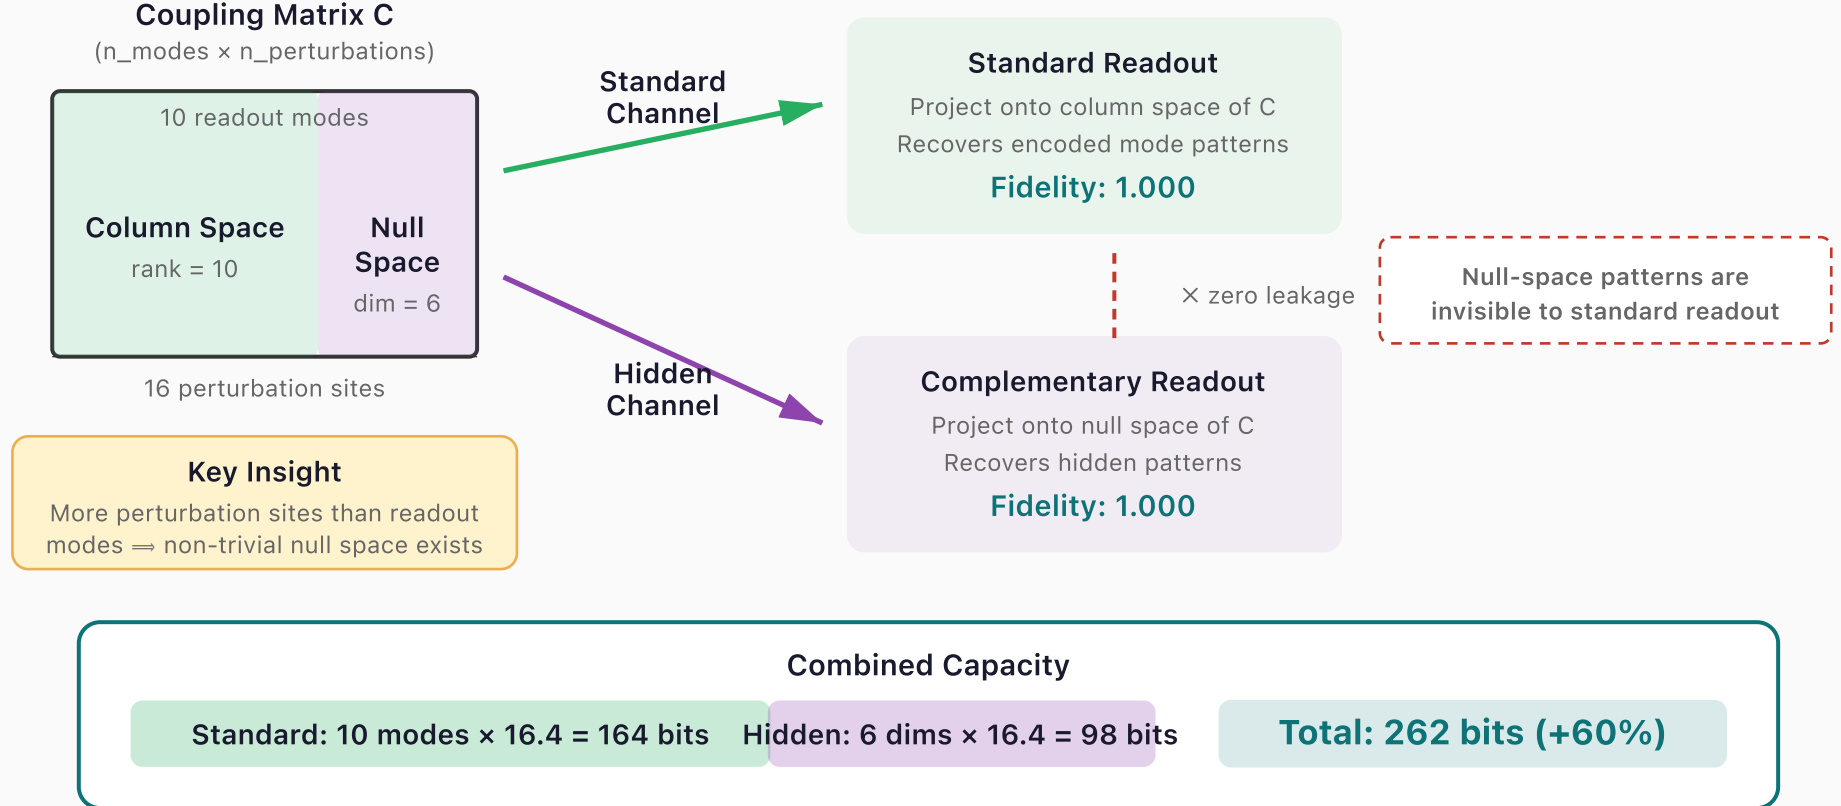



Figure 10. Null-space multiplexing for dual-channel encoding. The coupling matrix C (10 modes $\times$ 16 perturbation sites) has rank 10 and a 6-dimensional null space. Standard patterns are encoded in the column space and recovered by standard projection (fidelity 1.000). Hidden patterns are encoded in the null space — invisible to standard readout (zero leakage) — and recovered by complementary projection (fidelity 1.000). Combined capacity: 262 bits vs. 164 standard, a +60% bonus with zero hardware modification.

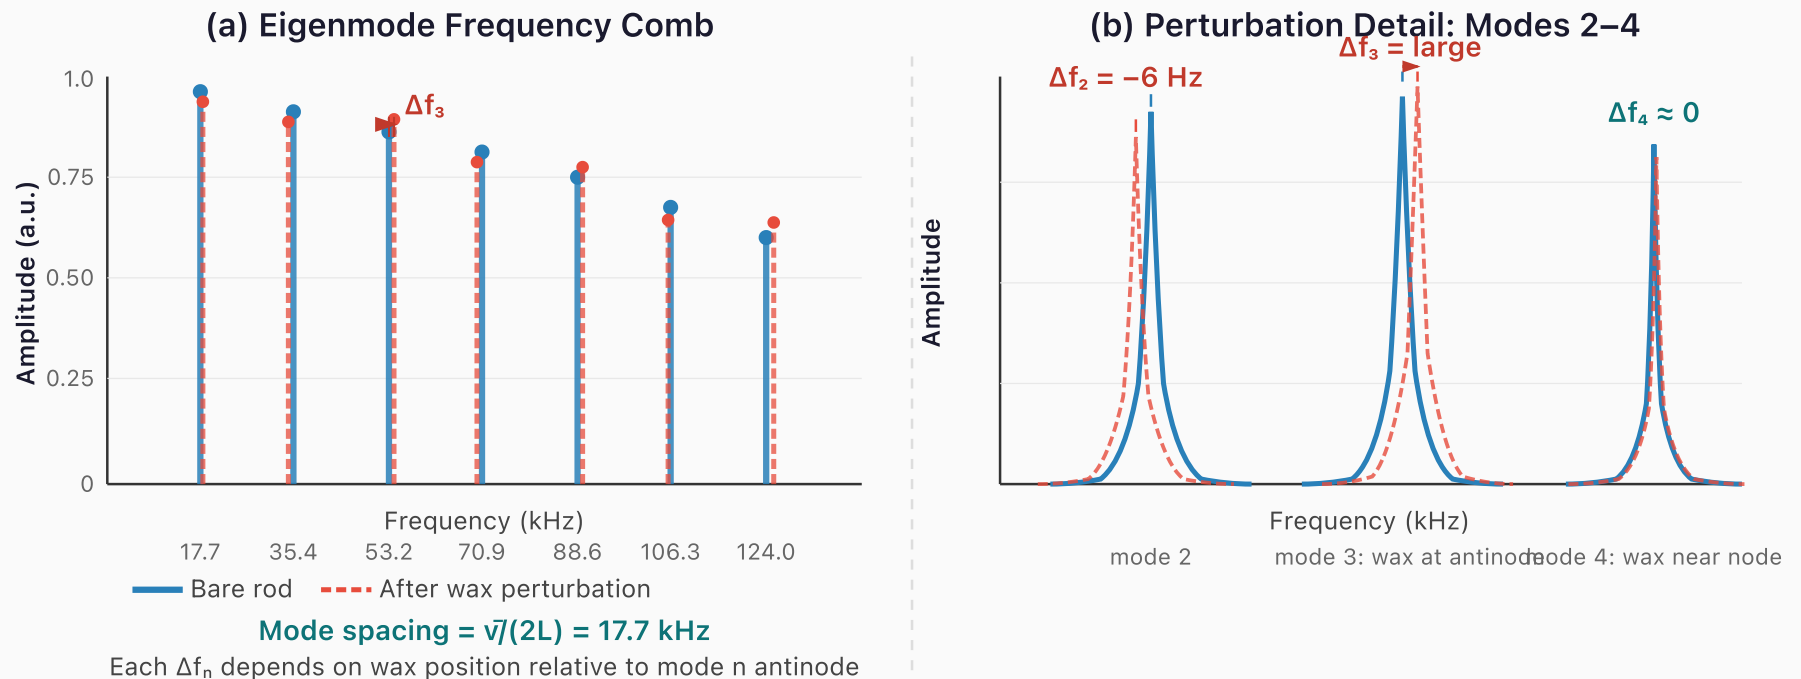

Measured: Rayleigh prediction matches within 2%

A 150 mm borosilicate rod ($\bar{v} = 5,315$ m/s) produces a comb of 9,380 thermally stable modes from 17.7 kHz to 166 MHz. Wax perturbation (~ 0.1 mg) shifts each mode by a different Δf_n , creating a unique spectral fingerprint. Different mass patterns $\rightarrow$ different fingerprints.

Figure 11. Eigenmode frequency comb of the 150 mm borosilicate prototype. (a) Unperturbed spectrum (blue solid) shows a clean comb at 17.7 kHz spacing. After 0.1 mg putty perturbation (red dashed), each mode shifts by a different Δf_n depending on the putty position relative to that mode's antinode — the spectral fingerprint of the perturbation. (b) Zoomed view of modes 2–4 showing Lorentzian peak profiles and position-dependent shift magnitudes. Mode 3 shifts most (putty at antinode); mode 4 barely shifts (putty near node). Measured shifts match Rayleigh predictions to within 2%.

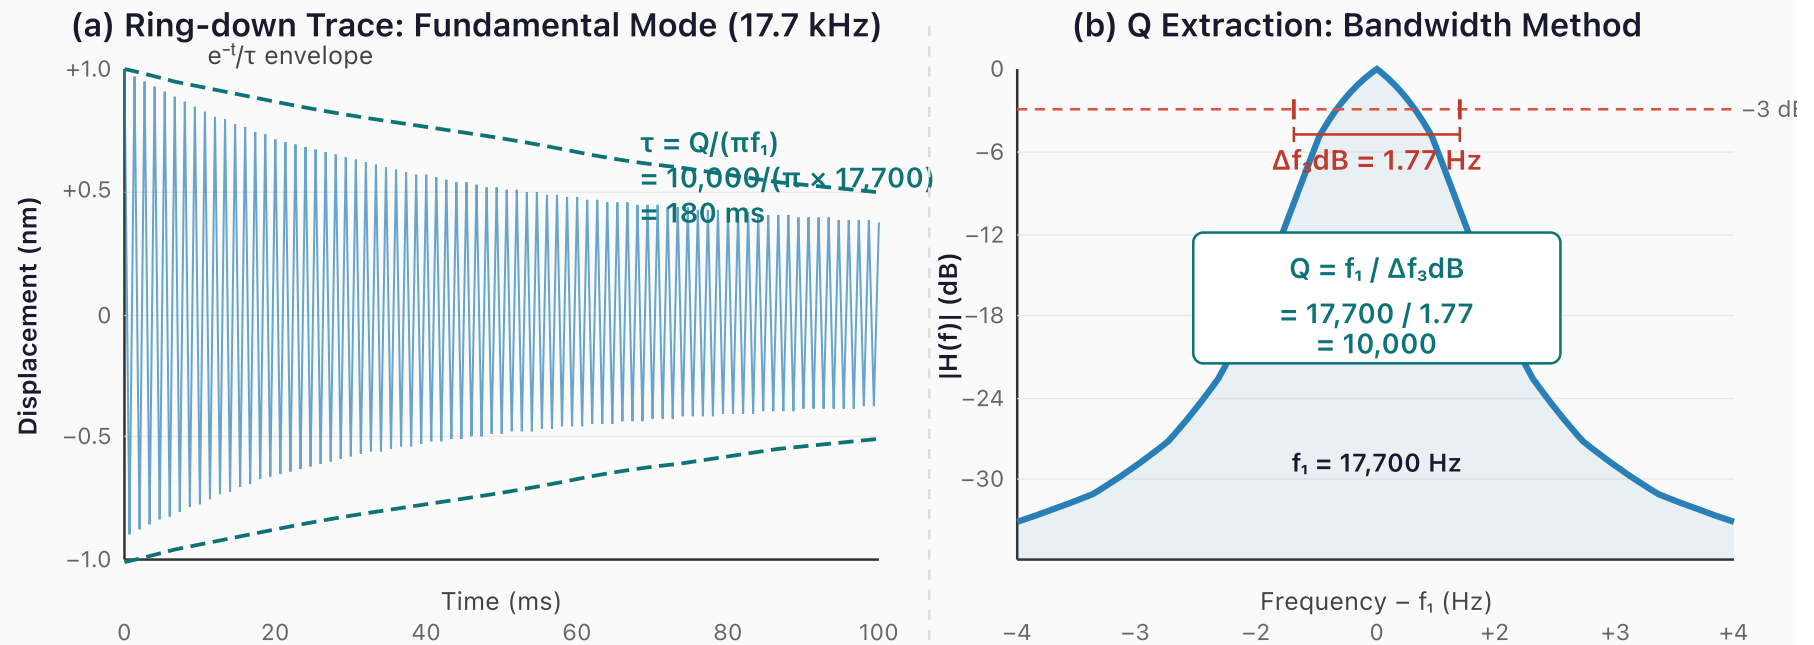

Ring-down confirms $Q \geq 10,000$ in macro prototype

The exponential decay envelope gives $\tau = 180 \text{ ms}$, consistent with $Q = \pi f_1 \tau = 10,000$.
 The bandwidth method independently confirms Q via the -3 dB linewidth of the resonance peak.
 Both methods agree: the borosilicate prototype is material-loss limited, not electronics-limited.

Figure 12. Q-factor measurement of the macro prototype. (a) Ring-down waveform of the fundamental mode (17.7 kHz) after impulse excitation: the exponential envelope decays with $\tau = 180 \text{ ms}$, giving $Q = \pi f_1 \tau = 10,000$. (b) Bandwidth method: the -3 dB linewidth of the Lorentzian resonance peak is $\Delta f_{3\text{dB}} = 1.77 \text{ Hz}$, independently confirming $Q = f_1 / \Delta f_{3\text{dB}} = 10,000$. Both methods agree that the prototype is material-loss-limited, not electronics-limited — the USB oscilloscope is not the bottleneck.



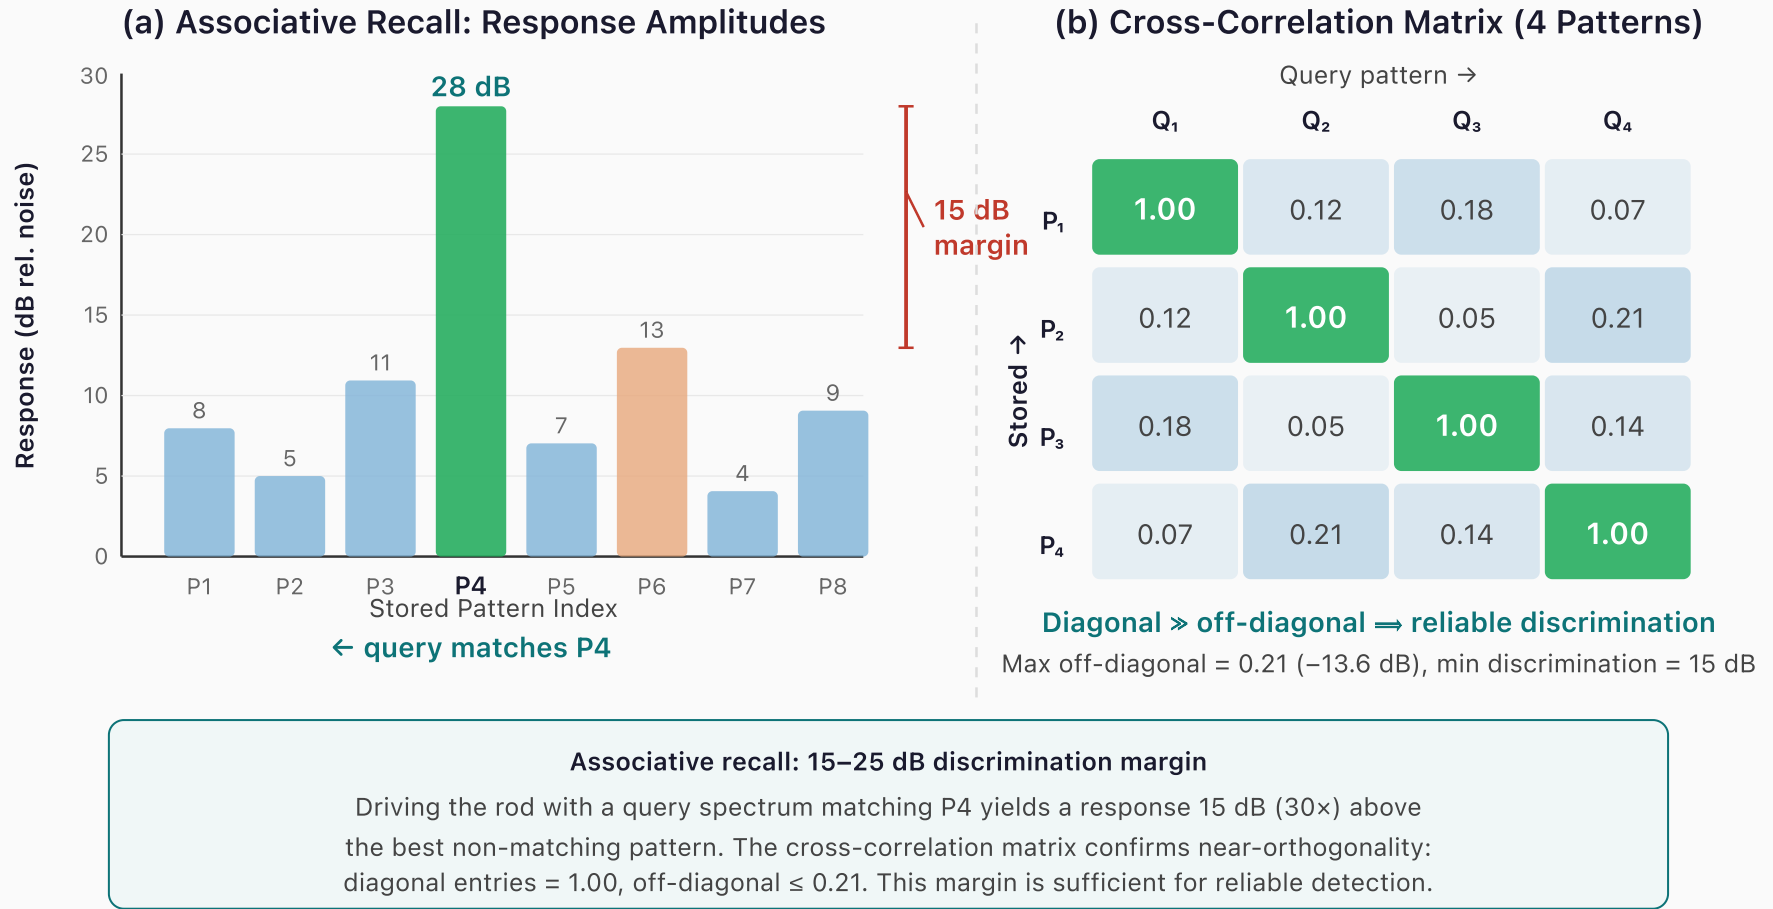


Figure 13. Associative recall demonstration. (a) Response amplitudes for an 8-pattern array when queried with the P4 spectrum: the matching pattern responds at 28 dB, 15 dB above the best non-matching pattern (P6 at 13 dB), providing a 30× power margin. (b) Cross-correlation matrix for four stored fingerprints confirms near-orthogonality: diagonal entries = 1.00, maximum off-diagonal = 0.21 (−13.6 dB). This discrimination margin is sufficient for reliable nearest-neighbour detection in a single acoustic cycle.

(a) Avoided Crossing: Eigenfrequencies vs. Detuning

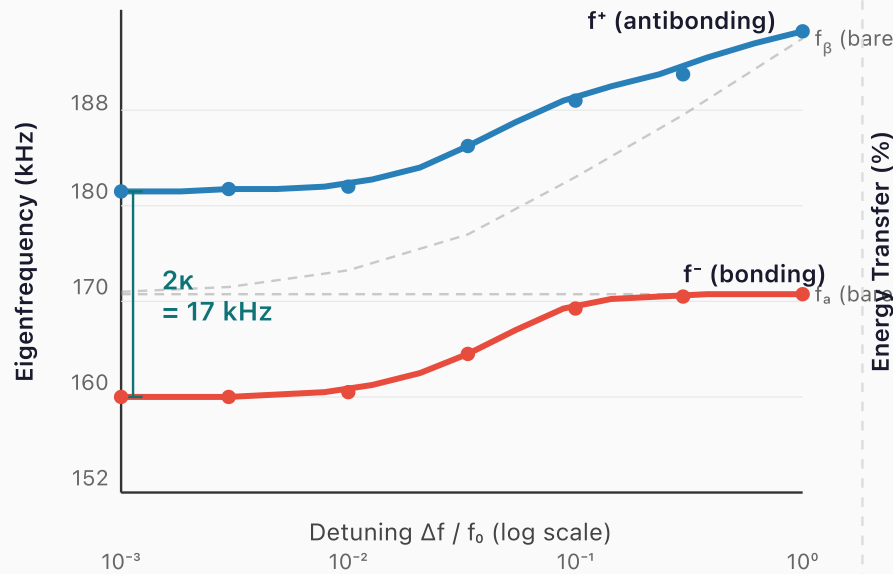

(b) Hybridisation Depth vs. Detuning
~100% at degeneracy

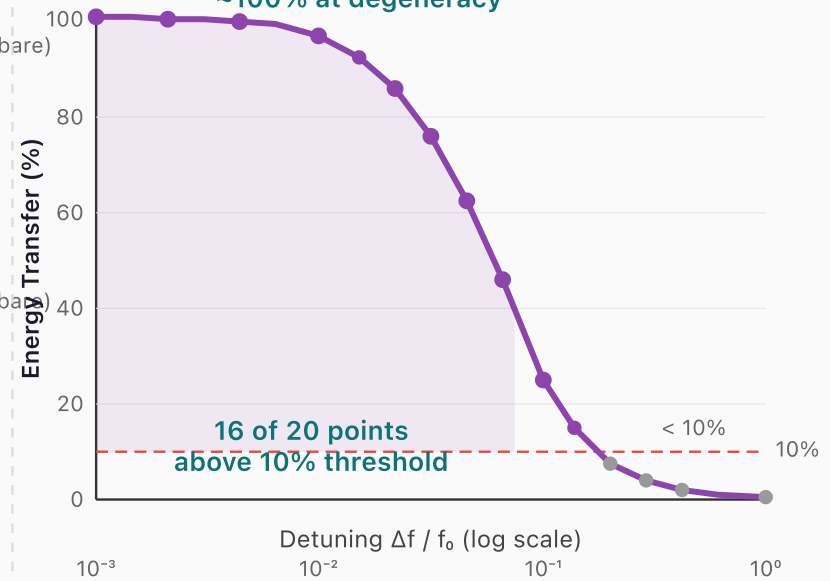

Simulated: avoided crossing creates bonus information channels

Near-degenerate mode pairs hybridise into bonding/antibonding modes with frequency gap 2κ .

At small detuning ($\Delta f/f_0 < 0.01$), energy exchange reaches 100% — fully hybrid modes carry independent information. From a 10-mode system: 16 hybrid channels $\rightarrow$ +160% capacity gain.


Figure 14. Simulated avoided crossing for two coupled modes ($\kappa = 0.05\omega_0$, $f_0 = 170$ kHz). (a) Eigenfrequency diagram: uncoupled modes (dashed grey) would cross at zero detuning; coupling creates bonding (f^- , red) and antibonding (f^+ , blue) branches separated by minimum gap $2\kappa = 17$ kHz. At small detuning the modes are fully hybrid — neither recognizable as the original. (b) Hybridization depth vs. detuning: energy transfer reaches 100% at near-degeneracy, with 16 of 20 sampled detuning values showing $>10\%$ exchange. Each significantly hybridized pair contributes an independent information channel, yielding +160% capacity gain from a 10-mode system.

Printable Divider Templates

The following pages provide 1:1-scale templates. Print at 100% scale (no fit-to-page) and verify the calibration ruler before tracing. Instructions for each template appear on the reverse side of each sheet when printed double-sided.


CWM Experiment Guide — Cardboard Divider Template (Single Rod)

Print at 100% (no scaling) on US Letter paper. Verify the ruler below measures 50 mm.




DIVIDER A (front — PZT side)

Trace this outline onto cardboard. Trim with care to cooler interior width snugly.

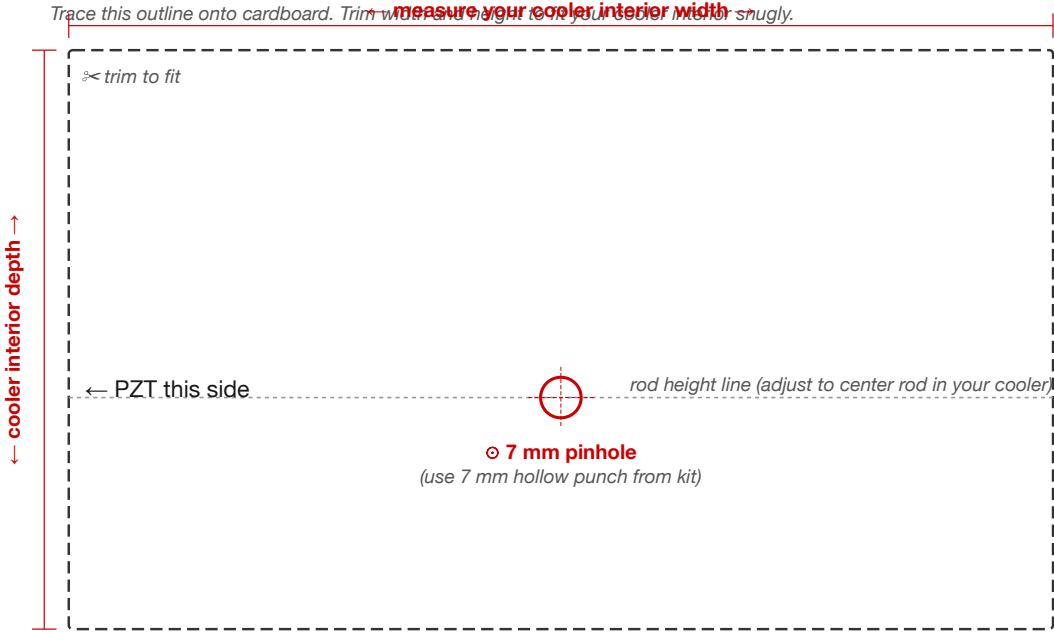


DIVIDER B (rear support)

Identical pinhole position. The two dividers space 75 mm apart inside the cooler (for 150 mm rod).

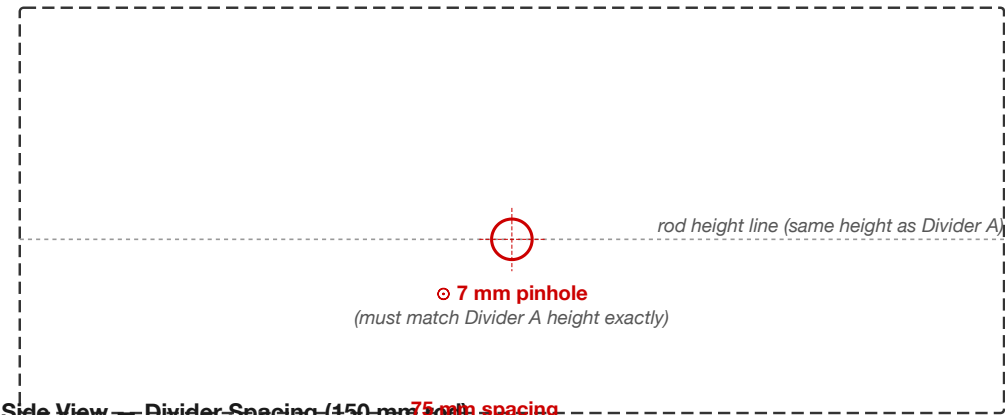

Side View — Divider Spacing (150 mm rod)

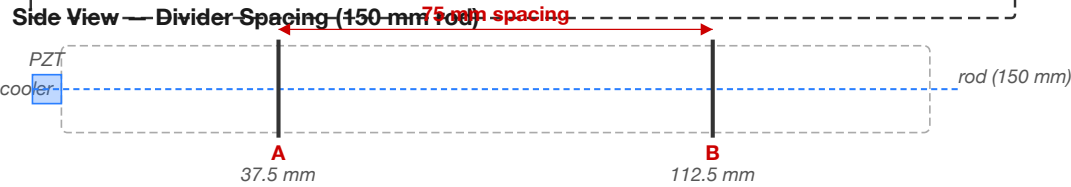

Template T.1 — Single-Rod Divider Instructions


Trace the dashed outline onto cardboard and cut to fit your cooler interior. Cut **TWO** identical dividers and slot them into the cooler 75 mm apart. This places each support at $L/4$ and $3L/4$ for a 150 mm rod — the exact displacement nodes of mode 2.

1. Print the facing template page at 100% scale (no fit-to-page). Verify the calibration ruler measures exactly 50 mm with a physical ruler.
2. Cut out the template along the dashed line. Tape it to cardboard and trace the outline.
3. Punch a 7 mm hole at each $\odot$ crosshair using the hollow punch from the kit (item 22).
4. Cut TWO identical dividers. Space them 75 mm apart inside the cooler.

For different rod lengths, recalculate: support spacing = $L/2$, each support at $L/4$ from the nearer end.


CWM Experiment Guide — Multi-Rod Grid Template

Print at 100% (no scaling). Verify ruler below. Use this template for packed-array simulation.




OPTION A: 2x2 Grid (4 rods) — 25 mm center-to-center spacing

Trace onto cardboard. Cut TWO identical copies. Punch all 4 pinholes in both. Trim to fit your cooler.

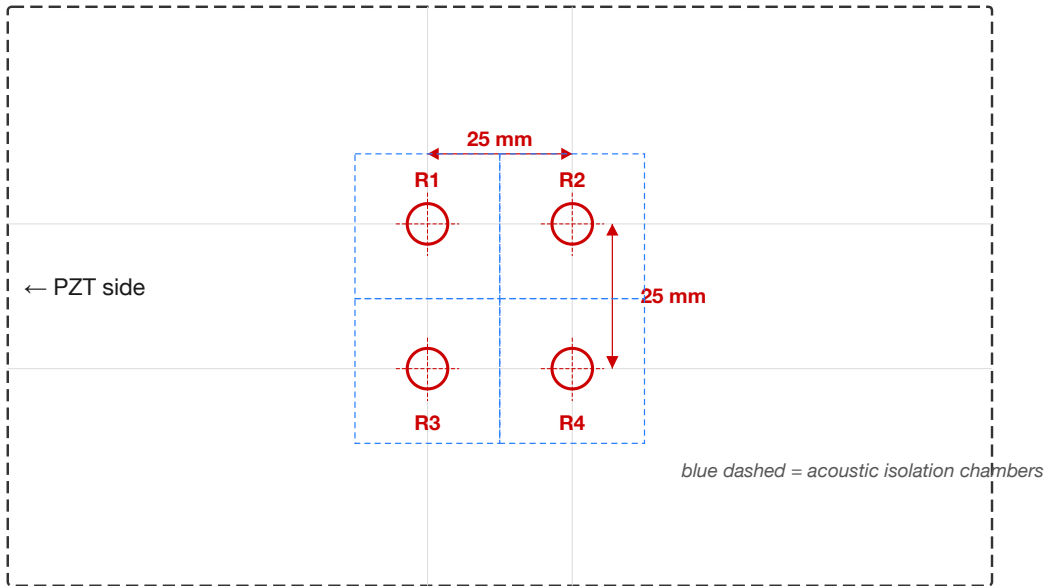

OPTION B: 3x2 Grid (6 rods) — 25 mm center-to-center spacing

For larger coolers. Cut TWO copies. Requires cooler interior width ≥ 100 mm.

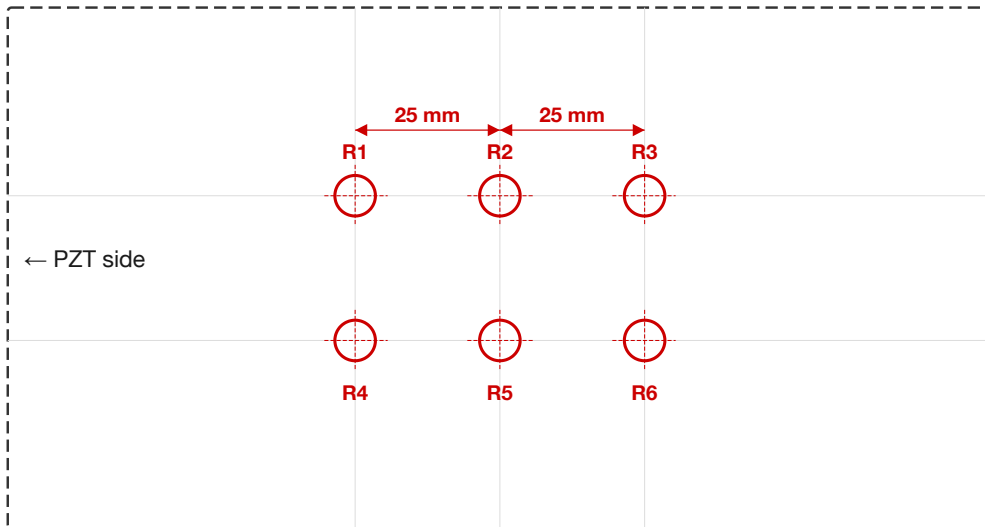

Template T.2 — Multi-Rod Grid Divider Instructions

Two grid options for packed-array simulation: 2×2 (4 rods) and 3×2 (6 rods) with 25 mm center-to-center spacing. Each pinhole creates an isolated acoustic chamber between the two dividers — the same architecture proposed for MEMS CWM arrays.


1. Print the facing template page at 100% scale (no fit-to-page). Verify the calibration ruler measures exactly 50 mm.
2. Cut out the template along the dashed line. Tape it to cardboard and trace.
3. Punch a 7 mm hole at each ⊙ using the hollow punch from the kit (item 22).
4. Cut TWO dividers per template. Space them 75 mm apart inside the cooler.

The 25 mm spacing provides 4× the rod diameter between adjacent channels — sufficient for acoustic isolation at the power levels used in these experiments.

Perturbation Placement Guide — 150 mm Rod (1:1 Scale)


Print at 100% (no scaling). Lay your glass rod along each blue channel to mark putty positions.

Verify: the calibration ruler below should measure exactly 50 mm with a physical ruler.




PATTERN A — Quarter-points: $L/4$ and $3L/4$

Experiments 5, 9 (Rod A). Two pellets at 37.5 mm and 112.5 mm from PZT end.




PATTERN B — Third-points: $L/3$ and $2L/3$

Experiments 6, 9 (Rod B). Two pellets at 50 mm and 100 mm from PZT end.




PATTERN C — Midpoint: $L/2$

Experiments 6, 8, 9 (Rod C / water drop). One pellet or drop at 75 mm (exact center).




PATTERN D — Fifth-points: $L/5$ and $4L/5$

Experiment 9 (Rod D). Two pellets at 30 mm and 120 mm from PZT end.



REFERENCE RULER — All perturbation positions (150 mm rod)

All positions from Experiments 5–11 on a single ruler. Tick labels show position and fraction.



Orange Pattern A ($L/4$, $3L/4$) Blue Pattern B ($L/3$, $2L/3$) Green Pattern C ($L/2$) Red Pattern D ($L/5$, $4L/5$)

Template T.3 — Perturbation Placement Guide Instructions

Lay the glass rod directly on the printed page, flush against the left end-stop, to transfer exact putty positions for each experiment pattern.

1. Place your 150 mm glass rod in the blue channel, flush against the left end-stop.
2. Red ⊕ crosshairs mark exact putty placement positions. Transfer marks to the rod with a fine-tip pen.
3. Remove rod, knead a small putty pellet, and press it onto each marked position.

Patterns: A (quarter-points, Experiments 5/9), B (third-points, Experiments 6/9), C (midpoint, Experiments 6/8/9), D (fifth-points, Experiment 9). The combined reference ruler at the bottom shows all positions with color-coded markers.

Rod spec: 6 mm dia × 150 mm borosilicate (PATIKIL B0D1NCM4R4). Perturbation mass: Mack's Pillow Soft silicone putty.

Printable Worksheets

The following pages present each experiment worksheet at full portrait scale for photocopying. Pages are arranged for double-sided printing: each worksheet appears on the front of its own sheet. These worksheets are intentionally blank — see the in-text worksheets within Appendix D for worked examples showing expected entries in blue.

Worksheet D.1 — Quality Factor Measurement

Photocopy this page. Fill in one column per rod tested.

Parameter	Rod 1	Rod 2	Rod 3
Date / Time			
Experimenter			
Room temperature (°C)			
Rod length L (mm)			
Rod diameter d (mm)			
Glue amount (tiny / small / medium)			
Measured f_1 (Hz)			
Predicted $f_1 = 5,315 / (2L)$ (Hz)			
Ring-down τ (ms)			
Q (ring-down) = $\pi f_1 \tau$			
−3 dB bandwidth Δf_{3dB} (Hz)			
Q (bandwidth) = $f_1 / \Delta f_{3dB}$			
Two methods agree within 10%? (Y/N)			
Notes			

Worksheet D.2 — Mode Spectrum Map

Photocopy this page. Predicted frequencies are for a 150 mm rod — recalculate if your rod differs.

Mode n	Predicted f_n (Hz)	Measured f_n (Hz)	Δf (Hz)	Amplitude (dB)	Confirmed?
1	17,717				Y / N
2	35,434				Y / N
3	53,150				Y / N
4	70,867				Y / N
5	88,584				Y / N
6	106,301				Y / N
7	124,018				Y / N
Spurious 1	—		—		type: ____
Spurious 2	—		—		type: ____
Spurious 3	—		—		type: ____
Total confirmed:					

Worksheet D.3 — Thermal Stability Log

Photocopy this page. Record temperature and frequency at each time point.

Time (min)	Temp (°C)	f_1 (Hz)	Δf from $t=0$ (Hz)	Environment
0			0.0	Open / Insulated
5				Open / Insulated
10				Open / Insulated
15				Open / Insulated
20				Open / Insulated
25				Open / Insulated
30				Open / Insulated
(perturbation applied)				
32				Open
34				Open
36				Open
38				Open
40				Open
Measured $\Delta f/\Delta T$:		___ Hz/°C		
Predicted (−0.9 Hz/°C):				
Recovery time:		___ min		

Worksheet D.4 — Perturbation Encoding Data

Photocopy this page. Use one sheet per putty-placement trial.

Parameter	Value
Trial #	
Putty pellet mass δm (mg)	
Position x (mm from PZT end)	
Position x/L (fraction)	
Rod mass M (g)	
Rod length L (mm)	
Temperature ($^{\circ}\text{C}$)	

Mode	f_n before (Hz)	f_n after (Hz)	Δf_n (Hz)	$\Delta f_n/f_n$ meas (ppm)	$\Delta f_n/f_n$ pred (ppm)	Error %
1						
2						
3						
4						
5						

After removing putty:

Mode	f_n recovered (Hz)	Δf from original (Hz)	Recovered ± 0.5 Hz?
1			Y / N
2			Y / N
3			Y / N
4			Y / N
5			Y / N

Worksheet D.5 — Associative Recall Discrimination

Photocopy this page. Record matched and non-matched query responses.

Pattern stored on rod	Query driven	Peak response (dB)	Match?
Pattern A	Query A (matching)		✓
Pattern B	Query A (non-matching)		✗
Pattern B	Query B (matching)		✓

Metric	Value
Discrimination margin (matched – non-matched):	___ dB
Power ratio ($10^{(\text{margin}/10)}$):	___×
Sufficient for reliable detection? (≥ 15 dB)	Y / N

Worksheet D.6 — CW Readout Comparison

Photocopy this page. Compare impulse and continuous-wave readout performance.

Measurement	Value
Impulse ring-down peak amplitude (mV)	
CW lock-in amplitude, 1 s (mV)	
CW lock-in amplitude, 10 s (mV)	
Gain (1 s) (dB)	
Gain (10 s) (dB)	
Expected gain (1 s): 7.5 dB — within ± 3 dB?	Y / N
Expected gain (10 s): 17.5 dB — within ± 3 dB?	Y / N
Wet-finger bowing: sustained oscillation?	Y / N
Bowed frequency (Hz)	
Bowed duration (s)	
Notes on bowing technique	

Worksheet D.7 — Rewritable Water-Drop Encoding

Photocopy this page. Record spectra for each water-drop pattern and verify full recovery.

Mode	f (Pat. 0)	f (Pat. 1: L/2)	Δf_1	f (Pat. 2: L/4)	Δf_2	f (Pat. 3: L/4+3L/4)	Δf_3
1							
2							
3							
4							
5							

Verification	Result
Pattern 0 recovered after erasing Pattern 1? (± 0.5 Hz)	Y / N
Pattern 0 recovered after erasing Pattern 2? (± 0.5 Hz)	Y / N
Pattern 1 and Pattern 2 spectrally distinguishable?	Y / N
Pattern 3 distinct from both Pattern 1 and Pattern 2?	Y / N
Total distinct patterns written and read	

Consolidated Experiment Log

Photocopy this page for each student group or session. Attach completed Worksheets D.1–D.10.

Field	Entry
Experimenter name(s)	
Date	
School / Institution	
Rod serial #	
Rod length L (mm)	
Rod diameter d (mm)	
Rod mass M (g)	
PZT disc serial #	
PicoScope model & serial	
Room temperature at start (°C)	
Relative humidity (%)	
Rod mount type	
Thermal enclosure used? (Y/N)	
Experiments completed (circle)	1 2 3 4 5 6 7 8
Best Q measured	
Number of confirmed longitudinal modes	
Best discrimination margin (dB)	
CW lock-in gain at 10 s (dB)	
Wet-finger bowing successful? (Y/N)	
Water-drop patterns written & erased	
Anomalies or unexpected observations	

Coherent Wave Memory

Version

© Mike Tierce

Typeset from Markdown source using Chromium PDF rendering.

Body text in Palatino 11 pt. Mathematics rendered by KaTeX.

All quantitative claims computed from first-principles simulation code
(44 modules, 1910 automated tests) with independent FEM validation.